 


MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS

# Quick Start Guide

**e-STUDIO5520c/6520c/6530c**

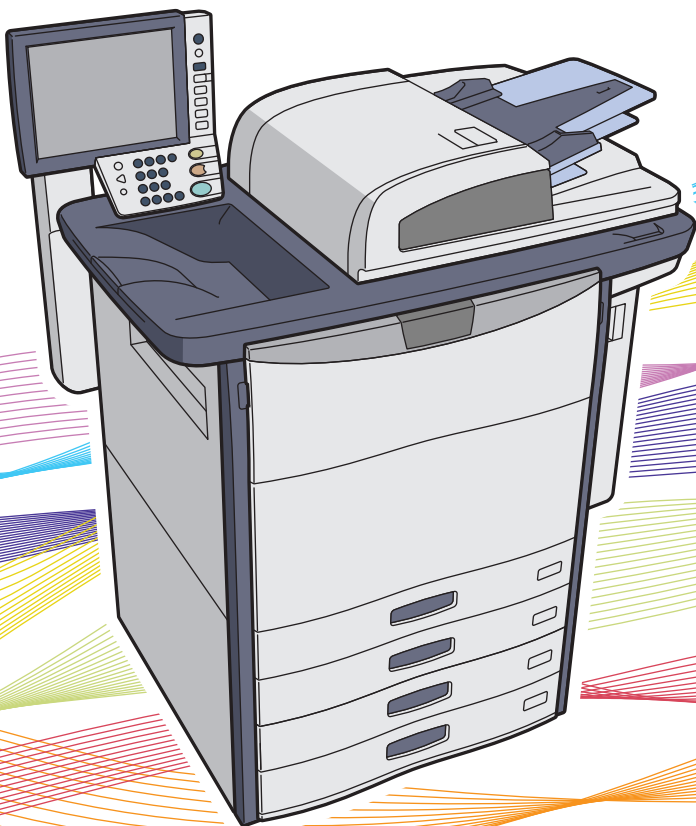



# Preface

Thank you for purchasing the TOSHIBA Multifunctional Digital Color Systems.

This Quick Start Guide describes the preparation of the operation, the basic and advanced usage of this equipment.

Be sure to read this manual before you use this equipment. Keep this manual handy and retain it for future reference.

## Trademarks

- The official name of Windows 2000 is Microsoft Windows 2000 Operating System.
- The official name of Windows XP is Microsoft Windows XP Operating System.
- The official name of Windows Vista is Microsoft Windows Vista Operating System.
- The official name of Windows Server 2003 is Microsoft Windows Server 2003 Operating System.
- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, Mac OS, Safari, TrueType, and LaserWriter are trademarks of Apple Inc. in the US and other countries.
- Adobe, Adobe Acrobat, Adobe Reader, Adobe Acrobat Reader, and PostScript are trademarks of Adobe Systems Incorporated.
- Mozilla, Firefox, and Firefox logos are trademarks of Mozilla Foundation in the US and other countries.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL, NetWare, NDS are trademarks of Novell, Inc. in the US.
- TopAccess is a trademark of Toshiba Tec Corporation.
- Other company names and product names in this manual are the trademarks of their respective companies.

# Lineup of Our Manuals

We have provided you with these manuals for the operation of this equipment. Select and read the manual best suited to your needs. Some of these manuals are printouts and others are PDF files recorded in the User Documentation CD-ROM.

## Printouts

### Quick Start Guide (This manual)

This Quick Start Guide describes the preparation of the operation, the basic and advanced usage of this equipment.

### Safety Information

This Safety Information describes the necessary precautions for using this equipment. For your added safety, be sure to read this booklet before using this equipment.

## PDF files

### Copying Guide

This Copying Guide describes the operations and settings enabled with the [COPY] button on the control panel.

### Scanning Guide

This Scanning Guide describes the operations and settings enabled with the [SCAN] button on the control panel and those of Internet Fax.

### e-Filing Guide

This e-Filing Guide describes the e-Filing functions enabled from the control panel of this equipment and the e-Filing web utility.

### MFP Management Guide

This MFP Management Guide describes the operations and settings enabled with the [USER FUNCTIONS] button and the [COUNTER] button on the control panel.

### Software Installation Guide

This Software Installation Guide describes the installation procedures of printer drivers and utilities.

### Printing Guide

This Printing Guide describes the settings of printer drivers required for printing with this equipment and the various printing procedures.

## **TopAccess Guide**

This TopAccess Guide describes procedures for remote setup and management of this equipment from a web-based utility, the "TopAccess".

## **Troubleshooting Guide**

This Troubleshooting Guide describes how to troubleshoot the problems that could occur while you are using the equipment.

## **Network Fax Guide**

This Network Fax Guide describes the operations of the N/W-Fax Driver.

## **Operator's Manual for AddressBook Viewer**

This Operator's Manual for AddressBook Viewer describes the operations of the AddressBook Viewer.

## **Operator's Manual for Backup/Restore Utility**

This Operator's Manual for Backup/Restore Utility describes the operations and settings of the Backup/Restore Utility.

## **Operator's Manual for Remote Scan Driver**

This Operator's Manual for Remote Scan Driver describes the operations and settings of the Remote Scan Driver.

## **Operator's Manual for TWAIN Driver / File Downloader**

This Operator's Manual for TWAIN Driver / File Downloader describes the operations and settings of the "TWAIN Driver" and the utility "File Downloader" required for storing data in e-Filing of this equipment.

### **To read manuals in PDF (Portable Document Format) files**

Viewing and printing manuals in PDF files require that you install Adobe Reader or Adobe Acrobat Reader on your PC. If Adobe Reader or Adobe Acrobat Reader is not installed on your PC, download and install it from the website of Adobe Systems Incorporated.

# How to Read This Manual

## Symbols in this manual

In this manual, some important items are described with the symbols shown below. Be sure to read these items before using this equipment.

**WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding assets.

**CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage to the equipment or surrounding assets, or loss of data.

**Note** Indicates information to which you should pay attention when operating the equipment.

 
**Tip** Describes handy information that is useful to know when operating the equipment.

 Pages describing items related to what you are currently doing. See these pages as required.


## Description of original/paper direction

Paper or originals of A4 or B5 / LT size can be placed either in a portrait direction or in a landscape direction. In this manual, “-R” is added to this paper size when this size of paper or original is placed in a landscape direction.

e.g.) A4 / LT size original on the original glass

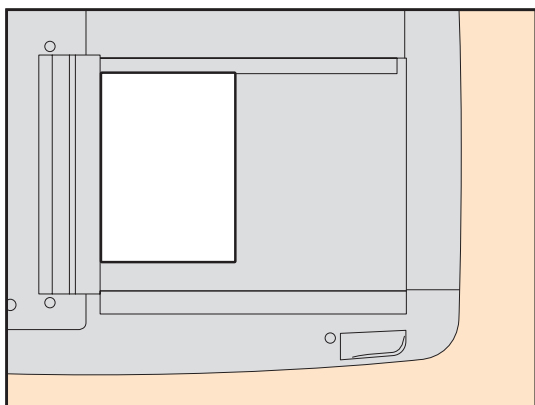

Placed in a portrait direction: A4 / LT

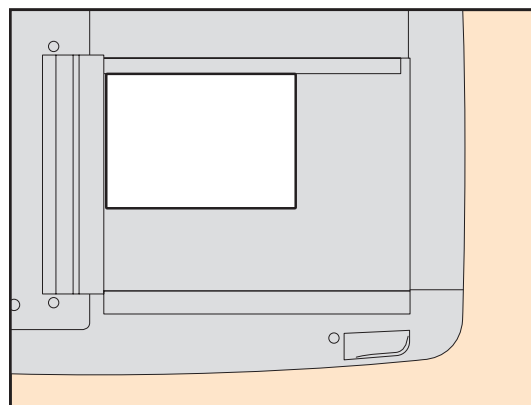 

Placed in a landscape direction: A4-R / LT-R

Paper or originals of A3 or A4 / LD or LG size can only be placed in a landscape direction, therefore “-R” is not added to these sizes.


## Screens

 Screens in this manual may differ from the actual ones depending on the use-environment of the equipment such as the installing status of options.

# Installation Space

Make sure that there is enough space around the system to facilitate changing of parts, maintenance and clearing paper jams.

If there is insufficient space, some operations, such as bypass feeding, will become difficult and the Multifunctional Digital Color Systems could even break down.

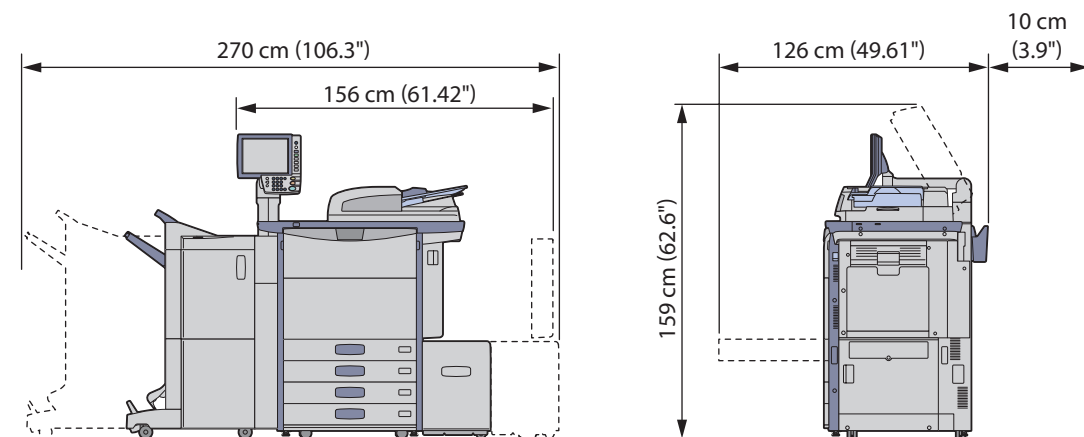

# CONTENTS

Preface.....	1
Lineup of Our Manuals .....	2
How to Read This Manual.....	4
Installation Space .....	5

## Chapter 1 PREPARATIONS

Items Included in This Product.....	8
CD-ROM .....	9
Client Software .....	10
Description of Each Component.....	12
Turning Power ON/OFF.....	22
When Department or User Management is Used .....	25
Placing Paper .....	30

## Chapter 2 BASIC OPERATION

Basic Copying Operation .....	32
Basic Fax Operation .....	34
Basic Scanning Operation .....	36
Basic e-Filing Operation .....	38
Basic Printing Operation.....	40
Basic Menu Operation.....	42

## Chapter 3 REPLACEMENT OF SUPPLIES

Replacing Toner Cartridge.....	44
Replacing Waste Toner Box .....	45
Adding Staples.....	46

## Chapter 4 ADVANCED FUNCTIONS / TROUBLESHOOTING

Advanced Functions .....	50
Messages or Other Indications on Touch Panel .....	58

## Chapter 5 MAINTENANCE & SPECIFICATIONS

Regular Maintenance .....	60
Specifications of Equipment.....	61
Specifications of Options.....	65

INDEX.....	67
------------	----



# Chapter 1

## PREPARATIONS

Items Included in This Product.....	8
CD-ROM.....	9
Client Software .....	10
Description of Each Component.....	12
Turning Power ON/OFF.....	22
When Department or User Management is Used .....	25
Placing Paper .....	30

# Items Included in This Product



The items included in this product are shown below.

The following items are included in the e-STUDIO5520C/6520C/6530C Multifunctional Digital Color Systems. Check that you have all the items.

## Items included in the product

Quick Start Guide (this guide)
Safety Information
Client Utilities CD-ROM
User Documentation CD-ROM
Setup report
Operator's Manual pocket
Cleaning cloth

## Notes

- For the details of the manuals, see the following page:  P.2 "Lineup of Our Manuals"
- For more details about the CD-ROMs, see the following page:  P.9 "CD-ROM"

# CD-ROM

The software included in the Client Utilities CD-ROM is shown below.

The following pieces of client software are included in the Client Utilities CD-ROM.

Client software	
For Windows	Client Software Installer
	PCL6 printer driver
	PS3 printer driver
	XPS printer driver
	TWAIN driver
	File downloader
	N/W-Fax driver
	AddressBook Viewer
	Remote Scan driver
	WIA driver
	TOSHIBA NDPS Gateway
	e-Filing Backup/Restore Utility
For Macintosh	PPD file for Mac OS X 10.2.4 to Mac OS X 10.5.x
For UNIX	UNIX filter (Solaris, HP-U, AIX, Linux, SCO)
	CUPS

## Note

For the details of the client software, see the following page: [P.10 "Client Software"](#)

For details, refer to the **Software Installation Guide**.

1

2

3

4

5

# Client Software

This product provides you with Client software for the printing, scanning e-Filing, network management and network fax functions.

## Client software for the print functions

<b>PCL6 printer driver</b>	This printer driver enables users to print color or black-and-white documents with the True Type font from Windows computers.
<b>PS3 printer driver</b>	This printer driver enables users to print documents with the PostScript font or images from Windows computers. This printer driver is normally used.
<b>XPS printer driver</b>	The XML Paper Specification (XPS) is a page description language developed by Microsoft. This printer driver enables users to print documents from the WPF applications created for Windows Vista.
<b>TOSHIBA NDPS Gateway</b>	TOSHIBA NDPS Gateway enable to configure the NDPS objects in servers running NetWare 5.1 with Support Pack 7 or higher, or NetWare 6.0/6.5.
<b>PPD file for Macintosh</b>	This printer driver enables users to print documents from Macintosh computers (Mac OS X10.2.4 to Mac OS X 10.5.x).
<b>UNIX filter</b>	UNIX filters enables users to print from the UNIX workstation over a TCP/IP network.
<b>CUPS</b>	CUPS files enable users to set up the CUPS print system from UNIX workstations.

For details, refer to the **Software Installation Guide** and **Printing Guide**.

## Client software for the scanning functions

<b>Remote Scan driver</b>	This driver enables you to obtain scanned data as an image in the applications supporting TWAIN on Windows computers over a TCP/IP network by remotely scanning the documents.
<b>WIA driver</b>	This driver enables you to obtain scanned data as an image in the applications supporting WIA (Windows Imaging Acquisition) scan driver on Windows computers.

For details, refer to the **Software Installation Guide**, **Operator's Manual for Remote Scan Driver** and **Scanning Guide**.

## Client software for the e-Filing functions

<b>TWAIN driver</b>	This driver enables you to obtain documents stored in e-Filing as an image in application supporting TWAIN on Windows computers over a TCP/IP network.
<b>File downloader</b>	File downloader enables you to obtain documents stored in e-Filing as an image in your Windows computers over a TCP/IP network.
<b>e-Filing Web utility</b>	This utility enables you to create boxes and folders, move and delete documents and manage e-Filing using a browser on your computer. You can also back up and restore the data in e-Filing.
<b>e-Filing Backup/Restore Utility</b>	This utility enables you to back up and restore the data in e-Filing.

For details, refer to the **Software Installation Guide**, **Operator's Manual for TWAIN Driver / File Downloader**, **e-Filing Guide** and **Operator's Manual for Backup/Restore Utility**.

## Client software for the network management

### TopAccess

TopAccess enables you to view the device information, monitor jobs, create templates and manage address book from your computers using a browser. The device can be set up and maintained with the administrator's function from your computers using a browser.

For details, refer to the **TopAccess Guide**.

## Software for the network fax functions

### N/W-Fax driver

The N/W-Fax driver enables you to send electronic documents as faxes or internet faxes from your computers to one or more contacts or groups via this equipment.

### AddressBook Viewer

AddressBook Viewer enables you to manage Fax numbers and Internet Fax addresses of the contacts and upload the address book from computers to this equipment.  
The contacts managed by AddressBook Viewer can be used for Fax and Internet Fax transmissions by N/W-Fax.

For details, refer to the **Software Installation Guide, Network Fax Guide** and **Operator's Manual for AddressBook Viewer**.

1

2

3

 
4

5

# Description of Each Component

This section describes the names and operations of the components and options.

## Front / Right side

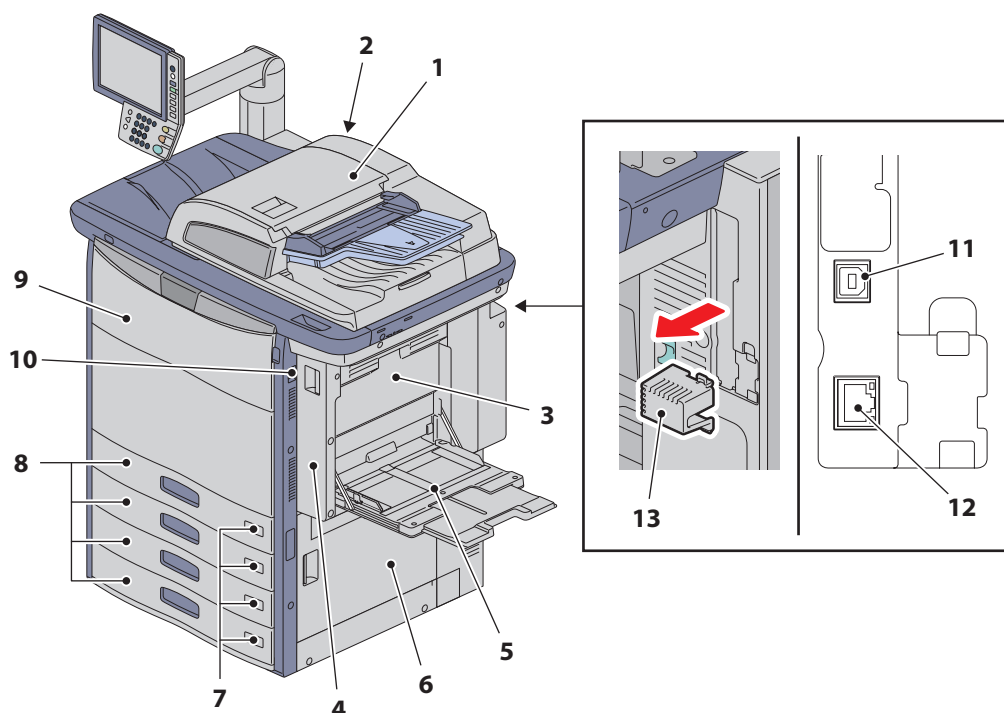

### 1. Reversing Automatic Document Feeder

The stack of originals is scanned one sheet at a time. Both sides of the originals can be scanned. A maximum of 100 originals (80 g/m<sup>2</sup> or 20 lb. Bond) (or stack height 16 mm or 0.62") can be placed in one go. (The maximum number of sheets that can be set may vary depending on the media type of the originals.)

### 2. Operator's manual pocket (back side)

Keep the manual in this pocket.

### 3. Duplexing unit cover

Open it when paper jams occur in the duplexing unit.

### 4. Duplexing unit

Use this unit for printing on both sides of the paper. Open it when paper jams occur.

### 5. Bypass tray

Use this to perform printing on special media types such as OHP film, waterproof paper, etc.

### 6. Paper feed cover

Open this cover when releasing paper misfed in the drawer feeding area.

### 7. Paper size indicator

### 8. Drawer

A maximum of 540 sheets (80 g/m<sup>2</sup> or 20 lb. Bond) or 500 sheets (105 g/m<sup>2</sup> or 28 lb. Bond) of plain paper can be placed in one go.

### 9. Front cover

Open this cover when replacing the toner cartridge or releasing paper misfed in the Bridge Unit.

### 10. Main power switch

Use this switch to turn the power of the equipment ON or OFF.

P.22 "Turning Power ON/OFF"

### 11. USB terminal (4-pin)

 
Use this terminal when connecting this equipment to a PC with a commercially available USB cable.

### 12. Network interface connector

Use this connector when connecting this equipment to a network.

### 13. Network interface connector cover

## Left side / Inner side

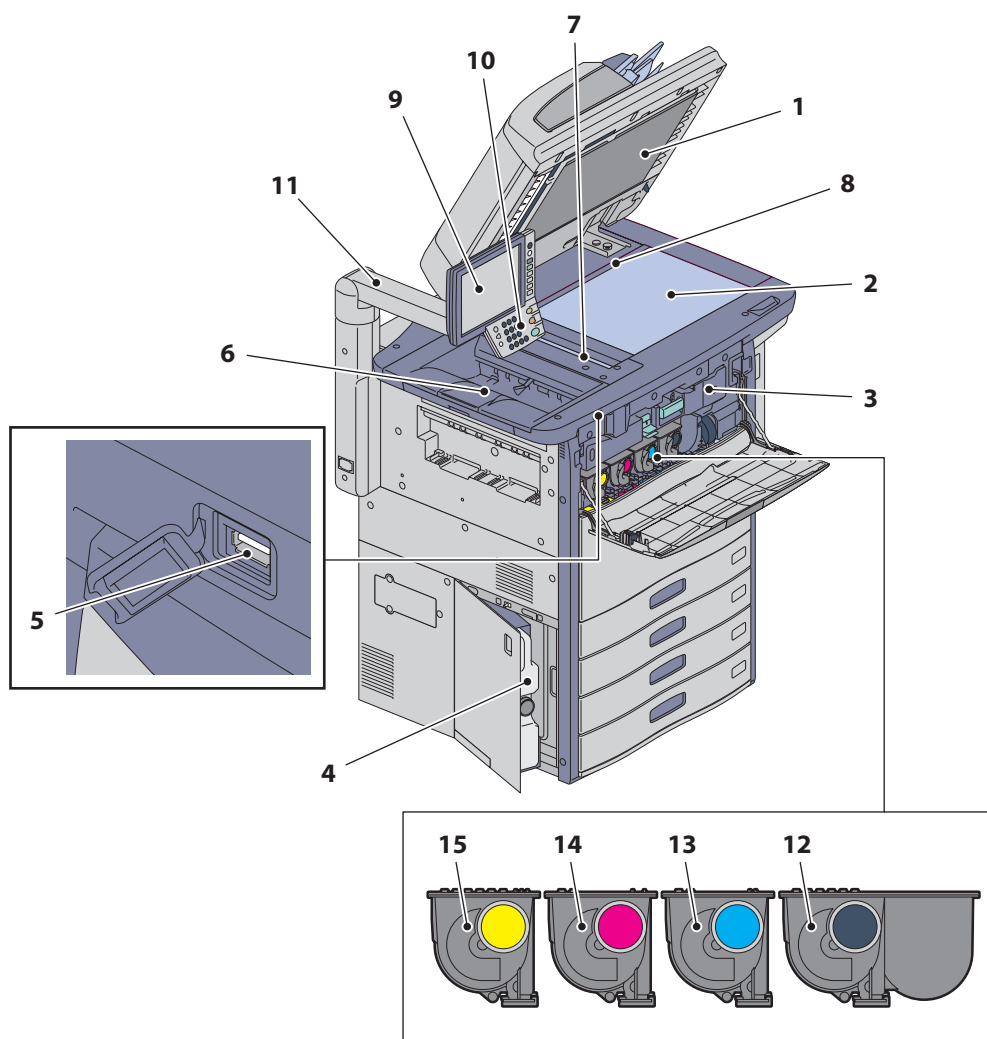

### 1. Platen sheet

☞ P.60 "Regular Maintenance"

### 2. Original glass

Use this to copy three-dimensional originals, book-type originals and special paper such as OHP film or tracing paper, as well as plain paper.

### 3. Bridge unit

Open it when paper jams occur.

### 4. Waste toner box

☞ P.45 "Replacing Waste Toner Box"

### 5. USB port

Use this port when printing files stored in a USB device or storing scanned data into the USB device.

### 6. Receiving tray

Printed paper exits into this tray. The loading capacity is approx. 100 sheets (80g/m<sup>2</sup> or 20 lb. Bond). This may vary depending on the paper conditions such as the degree of paper curling.

### 7. Scanning area

The data of originals transported from the Reversing Automatic Document Feeder are scanned here.

☞ P.60 "Regular Maintenance"

### 8. Original scale

Use this to check the size of an original placed on the original glass.

### 9. Touch panel

Use this to set and operate various types of functions such as copying and fax.

☞ P.19 "Touch panel"

### 10. Control panel

Use this to set and operate various types of functions such as copying and fax.

☞ P.16 "Control panel"

### 11. Control panel arm

Use this to adjust the height of the control panel.

☞ P.18 "Adjustment of the height and angle of the control panel"

### 12. Black toner cartridge

### 13. Cyan toner cartridge

### 14. Magenta toner cartridge

### 15. Yellow toner cartridge

☞ P.44 "Replacing Toner Cartridge"

1

 
2

3

4

5

## Configuration of options

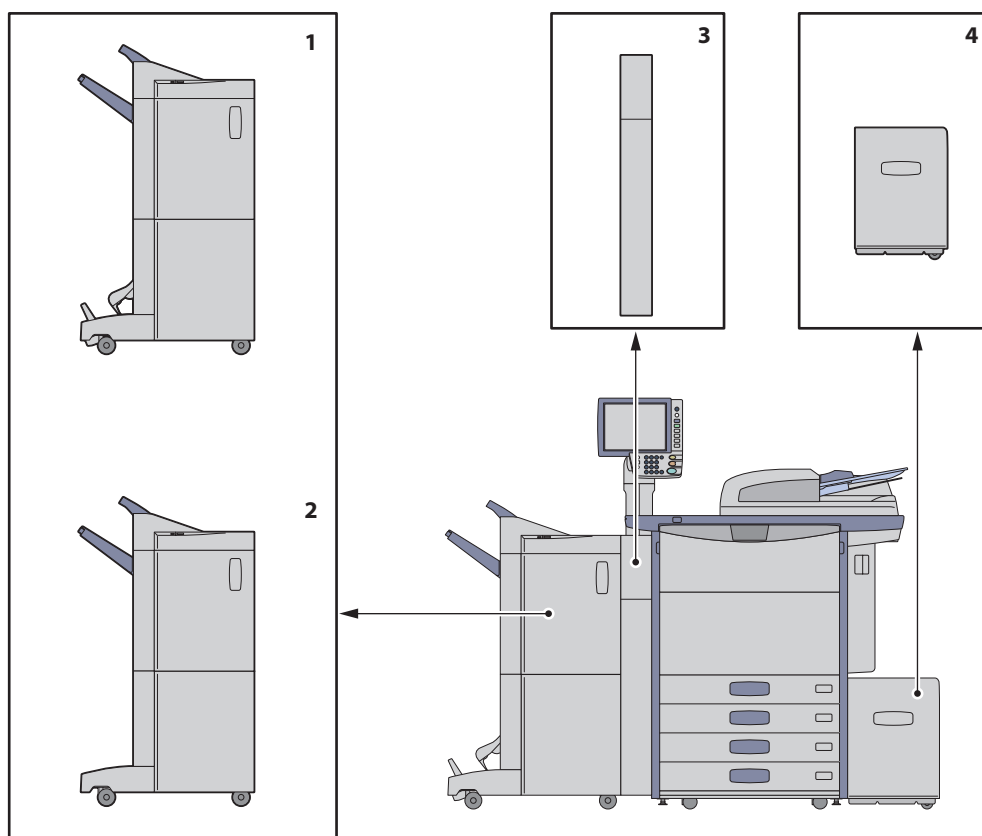

### 1. Saddle Stitch Finisher (MJ-1104)

This Finisher enables saddle stitching, in addition to sort/group finishing and stapling. The Hole Punch Unit (optional, MJ-6102) can be installed in this Finisher.

### 2. Finisher (MJ-1103)

This Finisher enables sort/group finishing and stapling. The Hole Punch Unit (optional, MJ-6102) can be installed in this Finisher.

### 3. Hole Punch Unit (MJ-6102)

This unit enables you to punch holes on printed sheets.

### 4. External Large Capacity Feeder (MP-2501)

This feeder enables you to feed up to 2500 sheets (80 g/m<sup>2</sup> or 20 lb. Bond) of A4 or LT paper.

Other options available are as follows. Contact your service technician or Toshiba product distributors for details.

### FAX Unit (GD-1270)

This is a unit for using the equipment as a Fax machine.

- Installed inside of the equipment

### 2nd Line for FAX Unit (GD-1260)

This unit enables you to add a line to the Fax, making a 2nd line available.

- Installed inside of the equipment
- The Fax Unit (optional, GD-1270) is required.

### Wireless LAN Module (GN-1050)

This module enables the equipment to be used in a wireless LAN environment.

- Installed inside of the equipment
- The Antenna (optional, GN-3010) is required.
- The equipment cannot be connected to the wireless and wired LAN at the same time.

### Bluetooth Module (GN-2010)

This module enables you to perform Bluetooth printing.

- Installed inside of the equipment
- The Antenna (optional, GN-3010) is required.

### Antenna (GN-3010)

This is used when the Wireless LAN Module or Bluetooth Module is installed.

### e-BRIDGE ID Gate (KP-2004, KP-2005)

You can login and use the equipment simply by holding the IC card over the e-BRIDGE ID Gate.

- Installed on the right-hand side of the equipment.



**Data Overwrite Enabler (GP-1070)**

This is an enabler to erase the data stored temporarily when copying, printing, scanning, Fax, internet Fax or network Fax is performed. It overwrites temporarily stored data with random data.

**IPSec Enabler (GP-1080)**

This enables the IPSec function in this equipment.

**Meta Scan Enabler (GS-1010)**

This enables the Meta Scan function in this equipment.

**External Interface Enabler (GS-1020)**

This enables the EWB function in this equipment.

**Finisher Guide Rail (KN-1103)**

This unit is used when the equipment is installed on soft surface flooring. This allows you to separate/install an optional finisher from/to the equipment easily.

1

2

 
3

4

5

## Control panel

Use the buttons on the control panel for various operations and settings in the equipment.

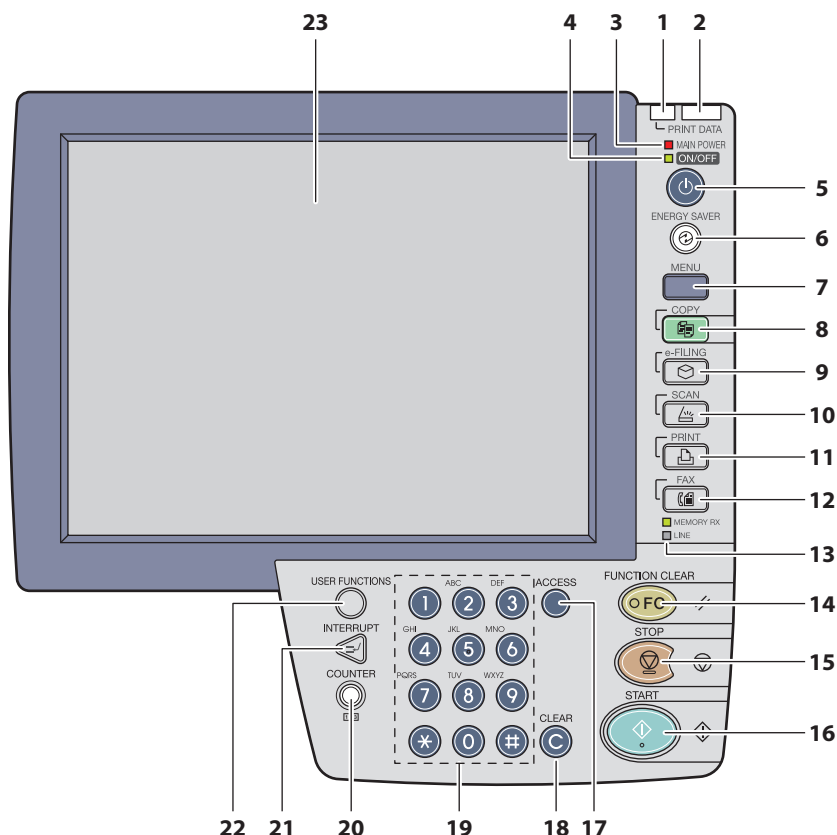

### 1. PRINT DATA lamp

This lamp lights during reception of data such as print data.

### 2. ALARM lamp

This lamp lights when an error occurs and the equipment needs some actions to be taken.

### 3. MAIN POWER lamp

This lamp lights when the main power switch of this equipment is ON.

### 4. ON/OFF lamp

This lamp lights when the POWER of this equipment is ON.

### 5. [POWER] button

Use this button to shut down the power of the equipment.

### 6. [ENERGY SAVER] button

Use this button for the equipment to enter the energy saving mode.

### 7. [MENU] button

Use this button to display frequently used templates.

### 8. [COPY] button

Use this button to use the copying function.

### 9. [e-FILING] button

Use this button to access stored image data.

### 10. [SCAN] button

Use this button to use the scanning function.

### 11. [PRINT] button

Use this button to use the printing functions such as private printing, in this equipment.

### 12. [FAX] button

Use this button to use the Fax / Internet Fax function.

### 13. MEMORY RX / LINE lamps

These lamps show the status of the Fax data reception and Fax communication. The equipment can be operated even while these lamps are lit.

### 14. [FUNCTION CLEAR] button

When this button is pressed, all selected functions are cleared and returned to the default settings. If the default setting is changed on the control panel, and then copying, scanning, Fax or similar is performed, this button blinks.

### 15. [STOP] button

Use this button to stop any scanning and copying operations in progress.

### 16. [START] button

Use this button to start copying, scanning and Fax operations.

**17. [ACCESS] button**

Use this button when the department code or user information has been set. If this button is pressed after copying, etc., the next user cannot use functions such as copying without keying in the department code or user information. Refer to the ***MFP Management Guide*** for the department and user management.

**18. [CLEAR] button**

Use this button to correct the numbers keyed in, such as the number of copy sets.

**19. Digital keys**

Use these keys to enter any numbers such as the number of copies, telephone numbers or passwords.

**20. [COUNTER] button**

Use this button to display the counter.

**21. [INTERRUPT] button**

Use this button to interrupt print processing and perform a copy job. The interrupted job is resumed by your pressing this button again.

**22. [USER FUNCTIONS] button**

Use this button for paper size or media type setting of drawers, and registration of the copy, scan and FAX settings including a default setting change. Refer to the ***MFP Management Guide*** for the functions enabled by this button.

**23. Touch panel**

Use this panel for the various settings of the copying, scanning and Fax functions. This panel also indicates the status of the equipment, such as when you run out of paper or there is a paper jam.

1

2

3

 
4

5

## Adjustment of the height and angle of the control panel


### Adjusting the height of the control panel

The height of the control panel is adjustable for your convenience.

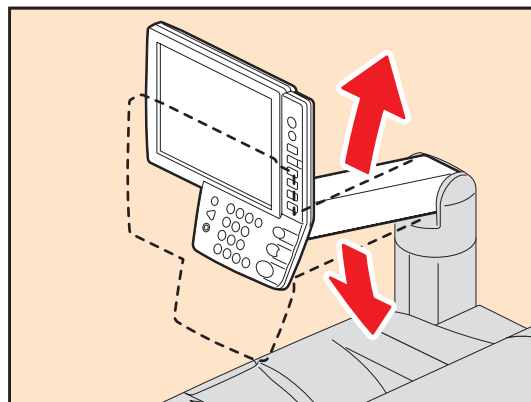

### Adjustment of the angle of the control panel

 
The control panel is adjustable at any angle, right or left, up or down.

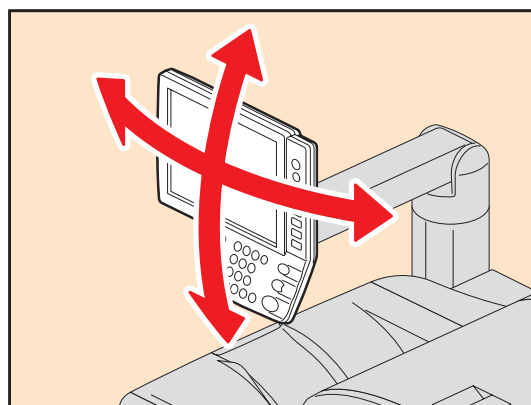

## Touch panel

When the power is turned ON, the basic menu for the copying function appears on this touch panel. The status of the equipment is also displayed on the touch panel with messages and illustrations.

 The menu shown at the time of turning the power ON can be changed to one for functions other than copying, for example, Fax function. Contact your service technician for details.

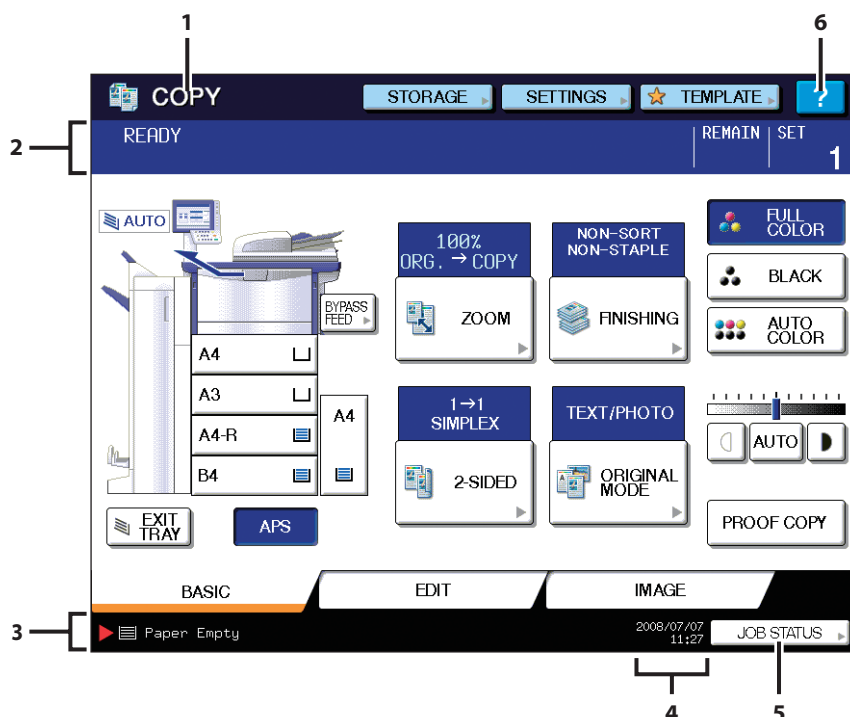

### 1. Function display

The function in use, such as copying or Fax, is displayed.

### 2. Message indication area

This shows how you operate this equipment or the current status of this equipment in message form.

### 3. Alert message indication area

This shows alert messages such as the replacement timing of the toner cartridges or the waste toner box.

### 4. Date and time

### 5. [JOB STATUS] button

This is for confirming the processing status of copy, fax, scan or print jobs, and also for viewing their performing history.

### 6. [Help] button

This is for viewing the explanation of each function or the buttons on the touch panel.

## Message display

The following information appears in the touch panel:

Equipment status, operational instructions, cautionary messages, reproduction ratios, number of copy sets, paper size of a selected drawer, amount of paper remaining in a selected drawer and date and time.

## Touch-buttons

Press these buttons on the touch panel lightly to set various functions.

1

2

 
3

4

5

## Clearing functions selected

When you press the selected button, the function which has been selected is cleared. Or the selected setting is cleared automatically by the automatic function clear\* when the equipment has been left inactive for a specified period of time.

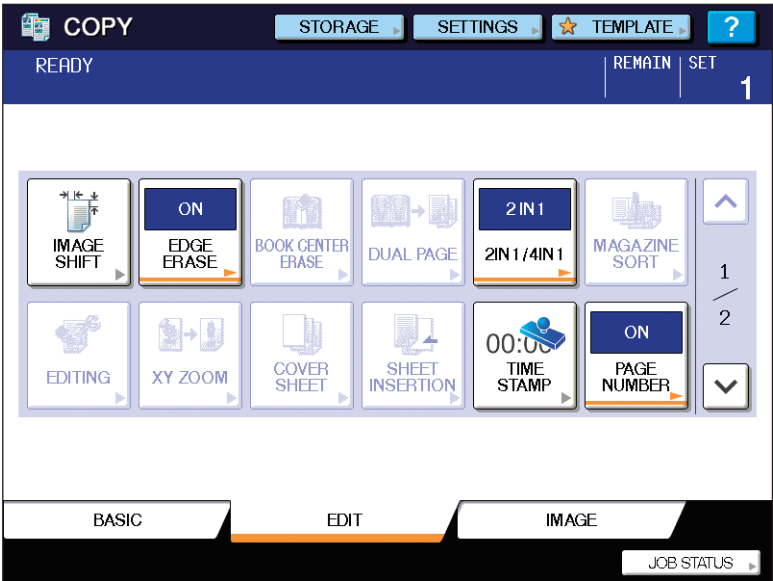

\* Automatic function clear:  
This function works when a specified period of time has passed since the last paper exit or the last entry of any button. This function returns all the function settings to default without the need to press the [FUNCTION CLEAR] button. When the department or user management function is being used, the display returns to the department code or user information input menu. When these functions are not being used, the display returns to the basic menu of the copying function.

The period for the automatic function clear is set at 45 seconds by default at the time of installation of the equipment. Refer to the **MFP Management Guide** for change of this setting.



## Adjusting the contrast of the touch panel

  You can set the contrast of the touch panel in the USER FUNCTIONS menu entered by pressing the [USER FUNCTIONS] button on the control panel. For details, refer to the **MFP Management Guide**.

## Setting letters

The following menu appears when the entry of any letter is required for the operations of scanning, e-Filing, template and Internet Fax.

Use the buttons on the touch panel for letter entry and use the digital keys on the control panel for number entry. After entering the letters, press [OK]. The menu will be changed.

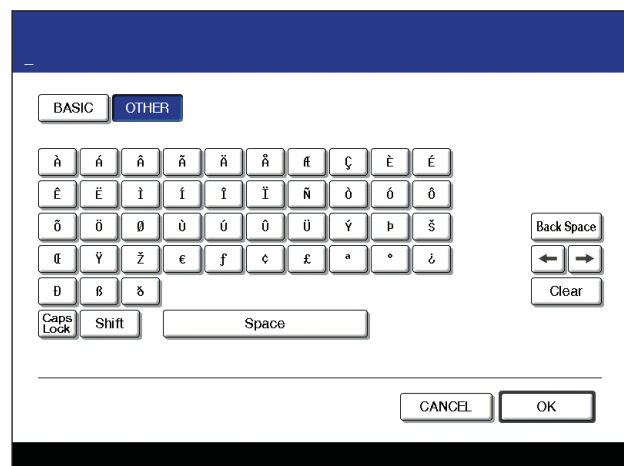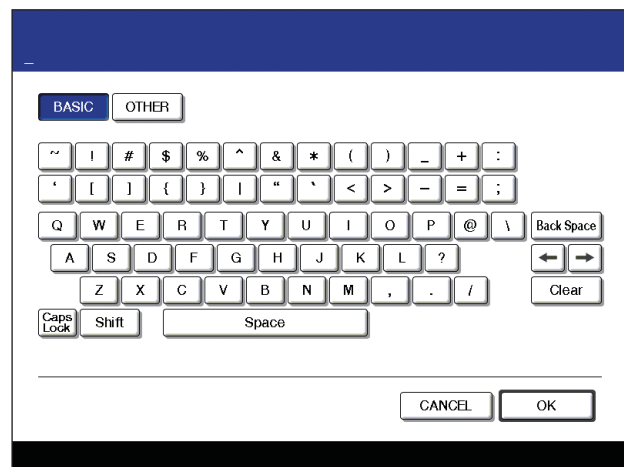

The following buttons are used for letter entry.

[BASIC]: Press this to access the basic keys.

[OTHER]: Press this to access the special keys.

[Caps Lock]: Press this to switch capital letters and small letters.

[Shift]: Press this to enter capital letters.

[Space]: Press this to enter a space.

[Back Space]: Press this to delete the letter before the cursor.

[] []: Press them to move the cursor.

[Clear]: Press this to delete all letters entered.

[CANCEL]: Press this to access the special keys.



[OK]: Press this to fix all entered letters.

# Turning Power ON/OFF

  
This section explains how to turn the power ON and OFF.

## Turning the power ON

If the MAIN POWER lamp is not lit, open the main power switch cover and turn the power ON with the main power switch.

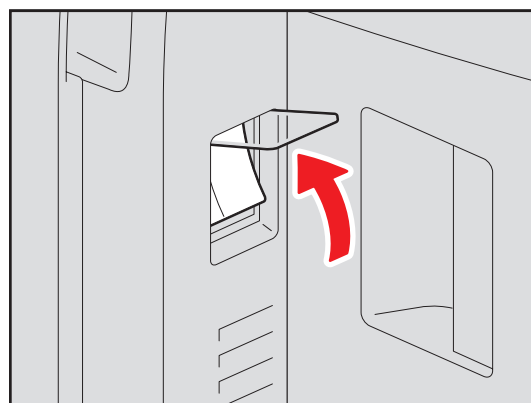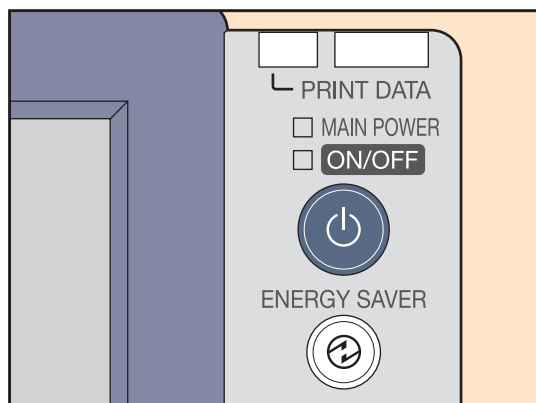

 If the MAIN POWER lamp is lit, press the [POWER] button until the ON/OFF lamp lights.

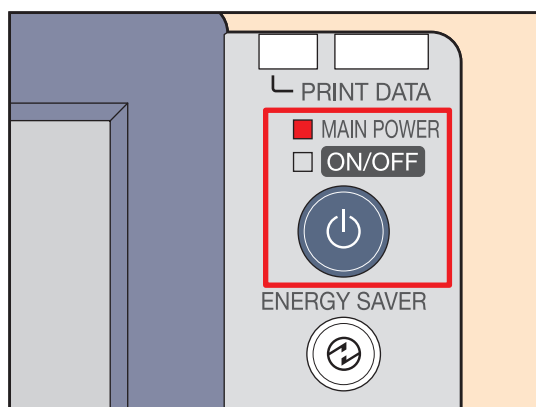

- The equipment starts warming-up. "Wait Warming Up" appears during warming-up.
- While the equipment is warming up, you can use the auto job start function. For details, refer to the **Copying Guide**.

The equipment will be ready for copying after about 180 seconds and "READY" appears.

When you turn the power of the equipment OFF, be sure to shut it down by pressing the [POWER] button on the control panel. (P.23 "Turning the power OFF (Shutdown)") Do not simply turn the main power switch.

### When "ERASING DATA" appears

This message appears when the Data Overwrite Enabler (optional) has been installed. It appears immediately after the power is turned ON or after the equipment has been operated. You can operate the equipment even if it is displayed.

### Tip

When the use of the equipment is managed under department management or user management function, you need to enter the department code or user information before making a copy. For details, see the following page:

P.25 "When Department or User Management is Used"



 
## Turning the power OFF (Shutdown)

When turning OFF the power of the equipment, be sure to shut it down according to the procedure below. Check the following three points before shutdown.


- No jobs should be left in the print job list.
- None of the PRINT DATA, MEMORY RX and LINE lamps should be blinking.  
(If the equipment is shut down while any of the above lamps is blinking, jobs in progress such as FAX reception will be aborted.)
- No PC should access the equipment via the network.

### Notes

- Use the [POWER] button on the control panel to turn the power OFF. Do not simply press the main power switch to turn the power OFF, otherwise the stored data may be lost or the hard disk may be damaged.
- When the equipment is shut down, the job in progress is cleared.

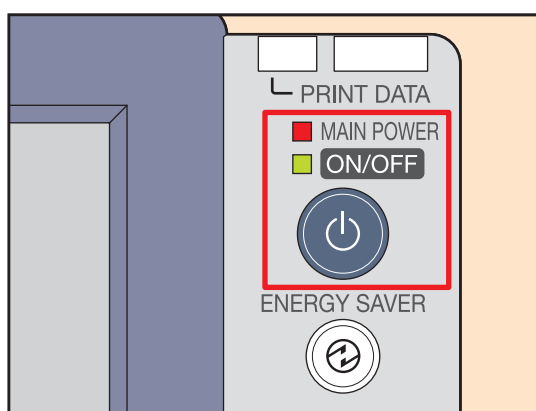


 Press the [POWER] button until the sound is heard.

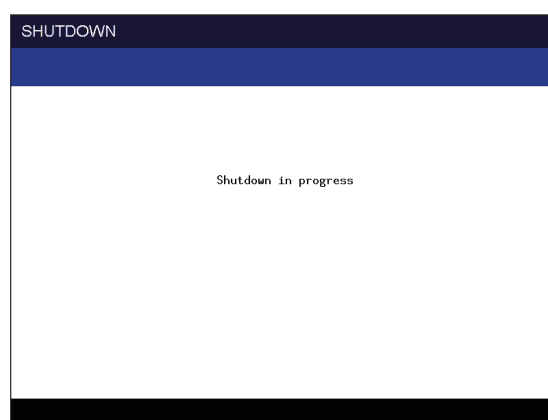

"Shutdown in progress" appears on the menu. After a while, the power of the equipment is turned OFF.

 If you will not use the equipment for a long period of time, press the [POWER] button on the control panel to shut down the equipment, confirm that the ON/OFF lamp is not lit and then turn the power OFF with the main power switch.

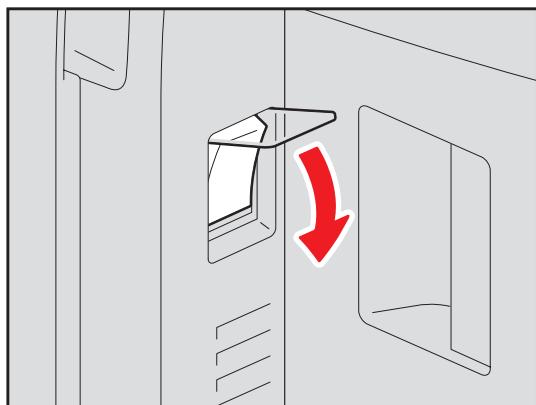

When the power is turned OFF with the main power switch, the main power switch lamp will go out.

1

2

3

4

5

## Energy saving mode

This equipment supports two energy saving modes; the Automatic Energy Save mode and the Sleep mode.

### Automatic Energy Save

The equipment enters the Automatic Energy Save mode automatically after a specified period of time\*<sup>1</sup> since its last use. During this mode, "Saving energy – Press START button" appears on the touch panel.

### Sleep mode

The equipment enters the Sleep Mode automatically after a specified period of time\*<sup>2</sup> since its last use. In this mode, the message on the touch panel goes off and the [ENERGY SAVER] button lights in green.

These modes are automatically cleared upon the reception of print data, Fax data, Internet Fax data or E-mails. They are also cleared by pressing the [START] button.

\*1 This period is set at 3 minutes for e-STUDIO5520C, 5 minutes for e-STUDIO6520C and 10 minutes for e-STUDIO6530C by factory default.

\*2 This period is set at 30 minutes by factory default.

 
Refer to the **MFP Management Guide** for changing the default settings noted above.

### Note

#### For the European version

Contact your service representative to change the default settings noted above.

The equipment can also be made to enter the sleep mode manually by means of the following procedure. In this mode, the message on the touch panel goes off and the [ENERGY SAVER] button lights in green.

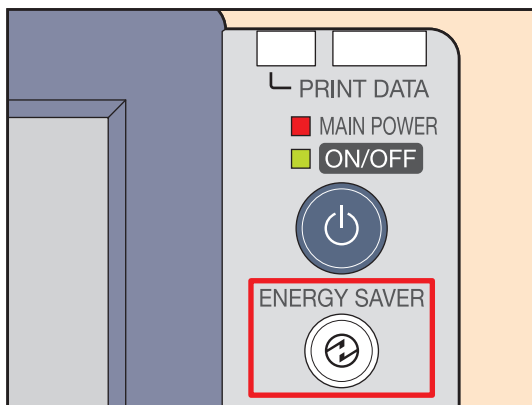

Press the [ENERGY SAVER] button on the control panel.

### To cancel the energy saving mode

Press the [START] button on the control panel. The sleep mode is cleared and the equipment will be ready for copying. The sleep mode can be also cleared by pressing any button of [ENERGY SAVER], [COPY], [e-FILING], [SCAN], [PRINT] and [FAX].

# When Department or User Management is Used

When the equipment is managed with the department or user management function, users need to enter the department code or user information before making copies, etc.

## Department management

You can restrict users or manage copy volumes made by an individual group or department in your company using the department codes. When the copy volume is controlled under the department code, enter the code after turning the power on. Refer to the **MFP Management Guide** for setting and registration of the department codes.

When the power of the equipment is turned ON, the following menu appears.

This menu also appears when the [ACCESS] button on the control panel is pressed or the automatic function clear has worked.

Key in a department code (5 digits) previously registered and press [OK] on the touch panel. The menu will switch and the equipment will be ready to be used.

If the department code keyed in is incorrect, the menu does not change. Key in the correct one.

### After the operation

When you finish all operations, press the [ACCESS] button on the control panel to prevent unauthorized use of the equipment. The display returns to the department code input menu.

1

2

3

4

5

# User management

Users of the equipment can be limited and the available functions and past record of each user can be controlled by using the user management function. When the equipment is managed under this function, turn the power ON and enter the information required (e.g. user name, password). The menu for entering user information also appears when you press the [ACCESS] button on the control panel or automatic function clear has worked. Enter the information according to the procedure below.

**Tip**

If a guest user is enabled in the user management, the [GUEST] button is displayed on the touch panel. Press [GUEST] to login as a guest user. For the types of functions available, consult the administrator.

## MFP local authentication, LDAP authentication

Enter the user name and Password

REMAIN | SET

1

USER AUTHENTICATION ▶ Key in the user name and password. Press OK.

USER NAME

GUEST

PASSWORD

OK

## Windows Domain Authentication

Enter the user name and Password

REMAIN | SET

1

USER AUTHENTICATION ▶ Key in the user name and password. Press OK.

USER NAME

GUEST

PASSWORD

DOMAIN

Dept01

OK

# 1 The menu for user authentication appears.

## MFP local authentication, LDAP authentication

Enter the user name and Password REMAIN SET 1

USER AUTHENTICATION ▶ Key in the user name and password. Press OK.

USER NAME

PASSWORD

## Windows Domain Authentication

Enter the user name and Password REMAIN SET 1

USER AUTHENTICATION ▶ Key in the user name and password. Press OK.

USER NAME

PASSWORD

DOMAIN

The domain name previously set by the network administrator is displayed in [DOMAIN].

### Tip

If the domain name belonging to your organization is not displayed, press [DOMAIN] and select it.

DOMAIN1

DOMAIN2

DOMAIN3

1

2

3

4

5

**2****Press [USER NAME].**

Enter the user name and Password | REMAIN | SET 1

USER AUTHENTICATION ▶ Key in the user name and password. Press OK.

USER NAME:

PASSWORD:

DOMAIN: Dept01

OK

**3****Enter the user name (maximum 128 letters) and then press [OK].**

User01\_

Virtual keyboard layout with keys: ~, !, #, \$, %, ^, &, \*, (, ), -, +, :, ' [ ] { } | " ' < > - = ;, Q W E R T Y U I O P @ \, Back Space, A S D F G H J K L ?, ← →, Z X C V B N M , . /, Clear, Caps Lock, Shift, Space.

CANCEL OK

**4****Press [PASSWORD].**

Enter the user name and Password | REMAIN | SET 1

USER AUTHENTICATION ▶ Key in the user name and password. Press OK.


USER NAME: User01

PASSWORD:


DOMAIN: Dept01

OK

- 5** Enter the password (maximum 64 letters) and then press [OK].

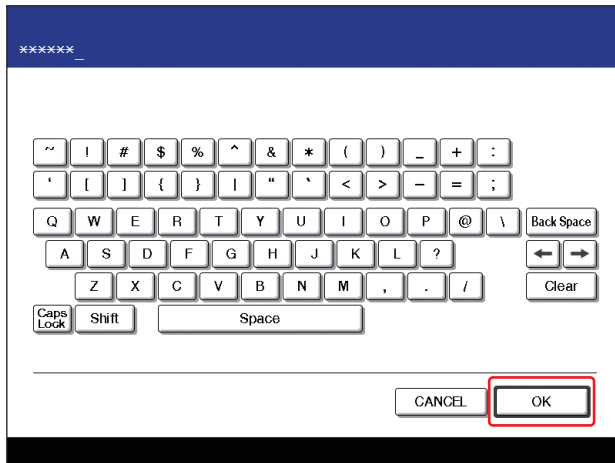

- 6** Press [OK].

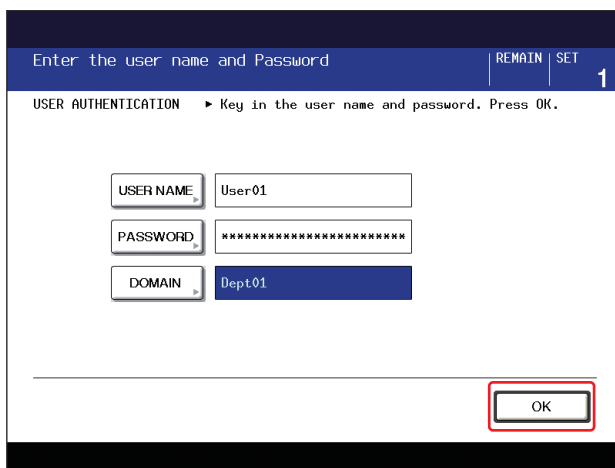

1

2


3

4


5

# Placing Paper

 
This section explains how to set paper in the drawers of the equipment.

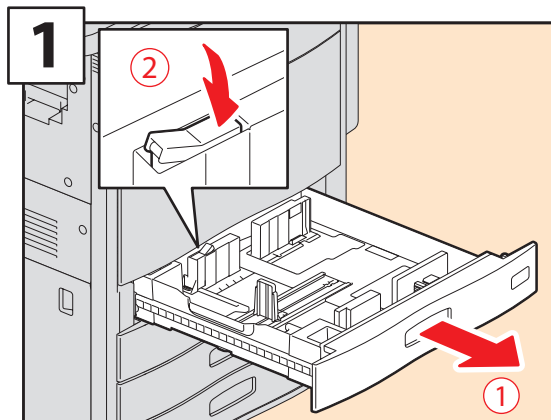

 
Pull out the drawer and release the lock.

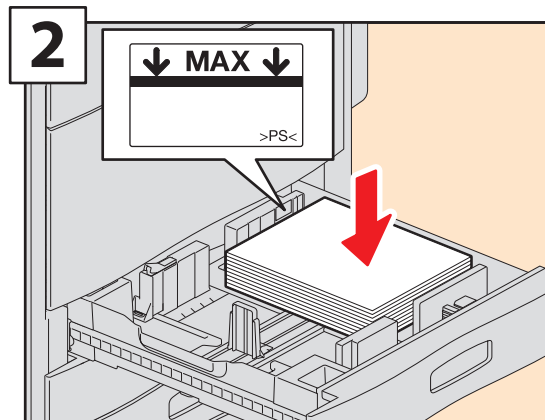


Place paper in the drawer.

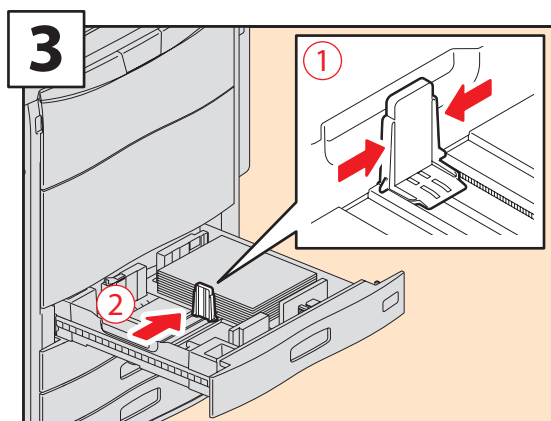 

 Set the end guide so that it matches the paper size.

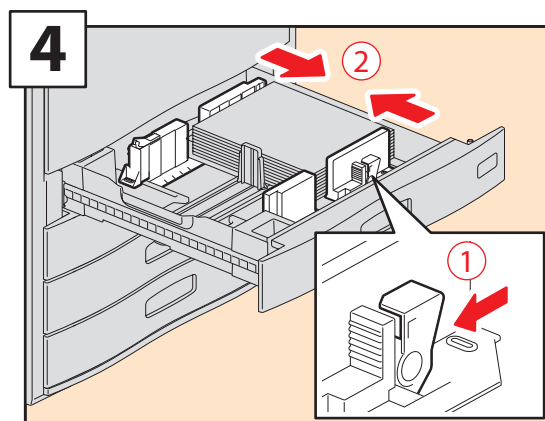

 Set the side guides so that they match the paper size.

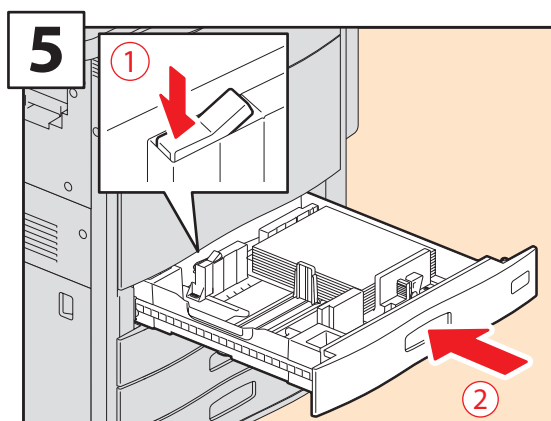

Lock the guides and push in the drawer.

## Tip

For paper that can be used in this equipment, see the following page: P.61 "Specifications of Equipment"

For details, refer to the **Copying Guide**.



# Chapter 2

## BASIC OPERATION

 
Basic Copying Operation .....	32
Basic Fax Operation .....	34
Basic Scanning Operation .....	36
Basic e-Filing Operation .....	38
Basic Printing Operation .....	40
Basic Menu Operation.....	42

# Basic Copying Operation


The basic color copying procedure is as follows. Press the [COPY] button to use the copying functions.

## 1 Place the original(s).


Original glass

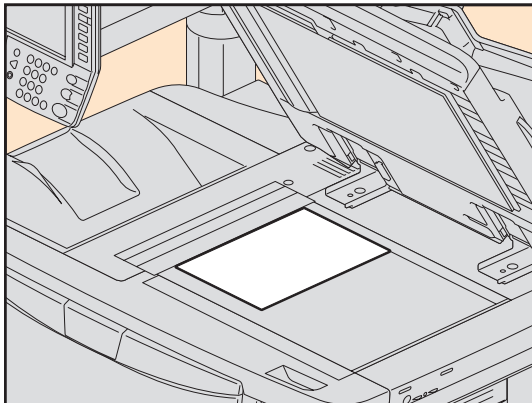

Reversing Automatic Document Feeder

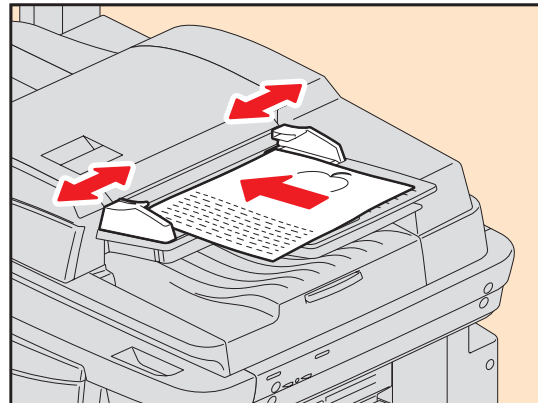 

## 2 Key in the desired number of copy sets, and then press the [START] button.

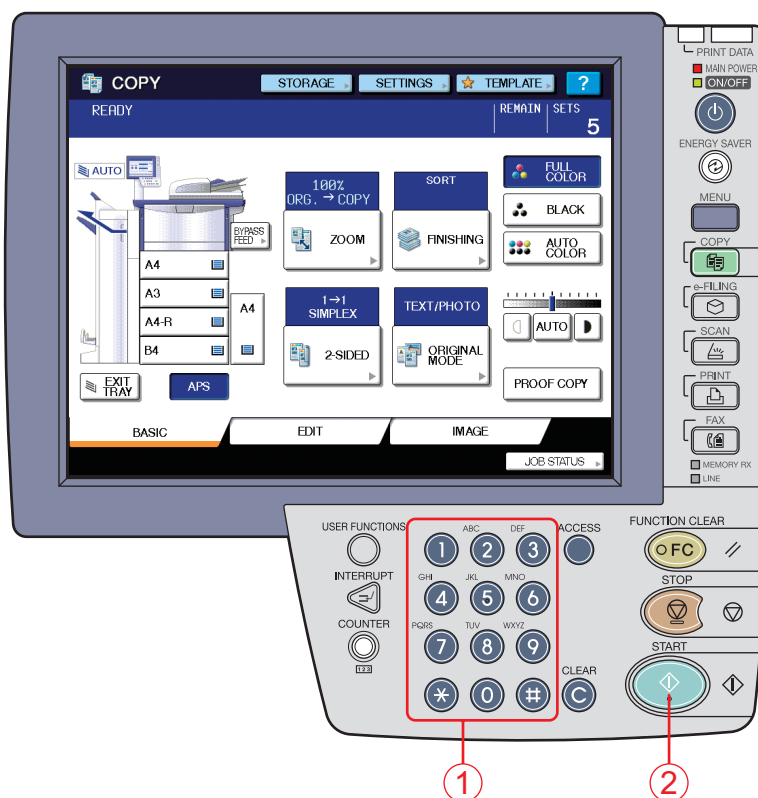 

Refer to the **Copying Guide** for details.

## In this case



### To stop copying

Press the [STOP] button on the control panel and [MEMORY CLEAR] on the touch panel. Refer to “Chapter 2 HOW TO MAKE COPIES” in the **Copying Guide** for details.



### To perform Interrupt copying

Press the [INTERRUPT] button on the control panel. Refer to “Chapter 2 HOW TO MAKE COPIES” in the **Copying Guide** for details.



 
 
 
### To clear the number of copy sets

Press the [CLEAR] button on the control panel.



### To return to the default setting

Press the [FUNCTION CLEAR] button on the control panel.

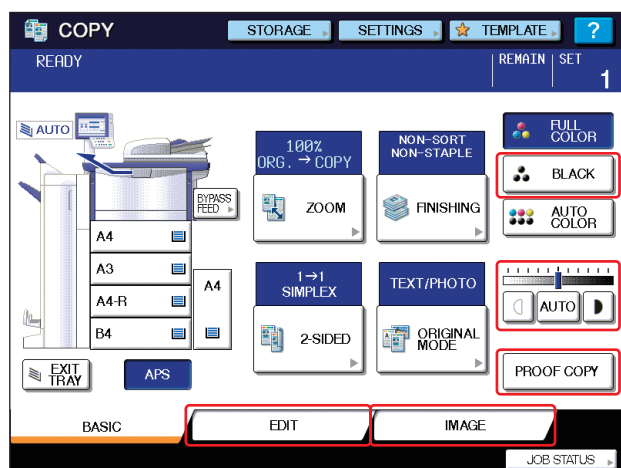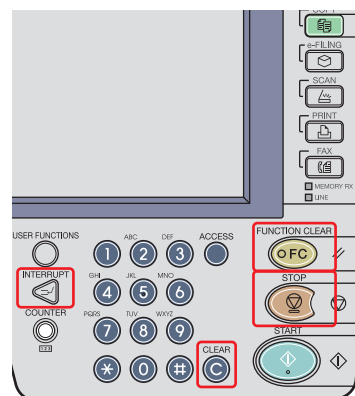


### To make black-and-white copies

Press [BLACK] on the touch panel. Refer to “Chapter 3 BASIC COPY MODES” in the **Copying Guide** for details.



### To adjust the copy density

 Press [AUTO] or [D] on the touch panel. Refer to “Chapter 3 BASIC COPY MODES” in the **Copying Guide** for details.



### To make a trial copy

Press [PROOF COPY] on the touch panel. Refer to “Chapter 2 HOW TO MAKE COPIES” in the **Copying Guide** for details.



### To use editing functions

To set editing functions such as Image shift, press the [EDIT] tab on the touch panel. Refer to “Chapter 4 EDITING FUNCTIONS” in the **Copying Guide** for details.



### To adjust copied images

To adjust the copied image such as for Color balance, press the [IMAGE] tab on the touch panel. Refer to “Chapter 5 IMAGE ADJUSTMENT” in the **Copying Guide** for details.

1

2

3

4

 
5

# Basic Fax Operation


The basic procedure for sending a Fax is as follows (The Fax Unit is optional). Press the [FAX] button to use the Fax functions.

## 1 Place the original(s).

Original glass

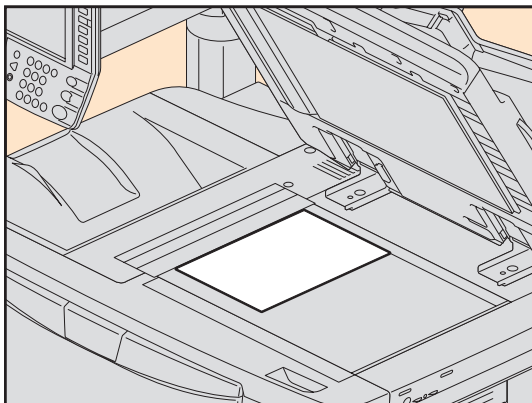

Reversing Automatic Document Feeder

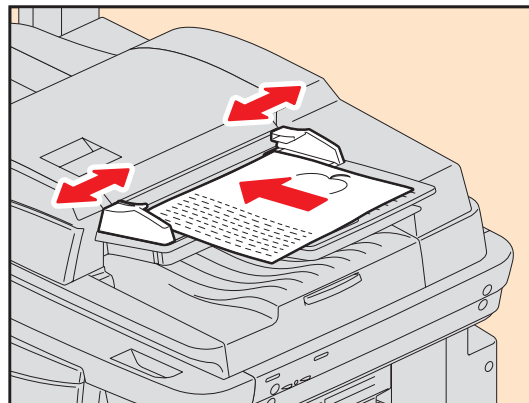 

## 2 Specify the Fax number using the digital keys or in the address book, and then press [SEND] on the touch panel.

 
 


Refer to the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details.

## In this case

**If you make a mistake when dialing the Fax number**

Press the [CLEAR] button on the control panel to delete all the Fax numbers you entered. Or press [BACK SPACE] on the touch panel to delete them one by one. Refer to “Chapter 2 SENDING/RECEIVING A FAX” in the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details.

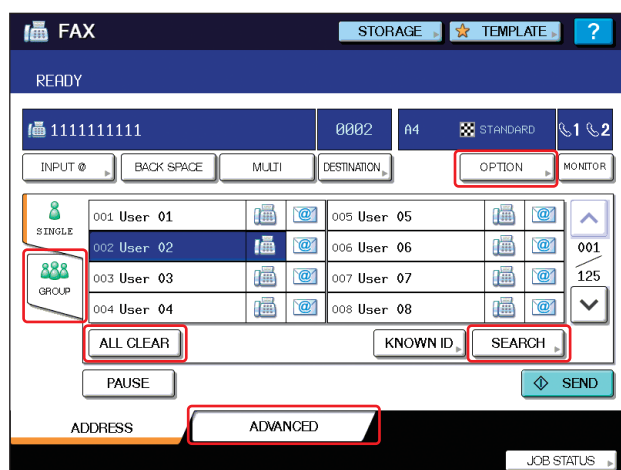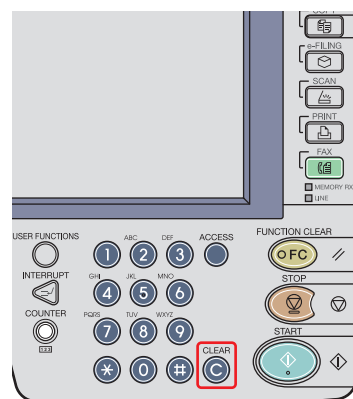

ALL CLEAR

**To delete all the Fax numbers specified in the address book**

Press [ALL CLEAR] on the touch panel.

**To specify Fax numbers which have previously been registered to a group**

Press the [GROUP] tab on the touch panel and then the Fax group to send originals. Refer to “Chapter 2 SENDING/RECEIVING A FAX” in the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details.

SEARCH

**To search by address**

Press [SEARCH] on the touch panel. Refer to “Chapter 2 SENDING/RECEIVING A FAX” in the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details.

OPTION

**To set the transmission conditions**

To set the transmission conditions, such as Resolution and Image density, press [OPTION] on the touch panel. Refer to “Chapter 2 SENDING/RECEIVING A FAX” in the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details.

ADVANCED

**To set advanced functions**

To set advanced functions, such as Mailbox communication and Recovery transmission, press the [ADVANCED] tab. Refer to “Chapter 4 ADVANCED FUNCTIONS” in the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details.

1

2

3

4

 
5

# Basic Scanning Operation


The basic scanning procedure is as follows. Press the [SCAN] button to use the scanning functions.

## 1 Place the original(s).

Original glass

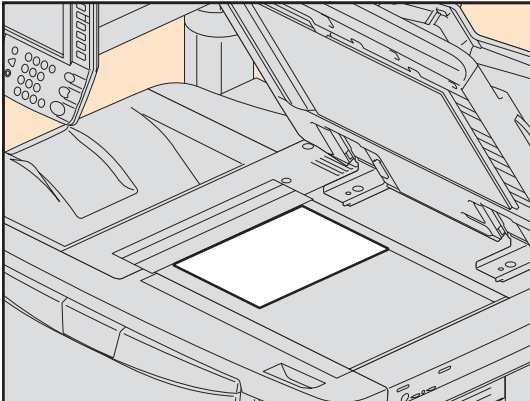

Reversing Automatic Document Feeder

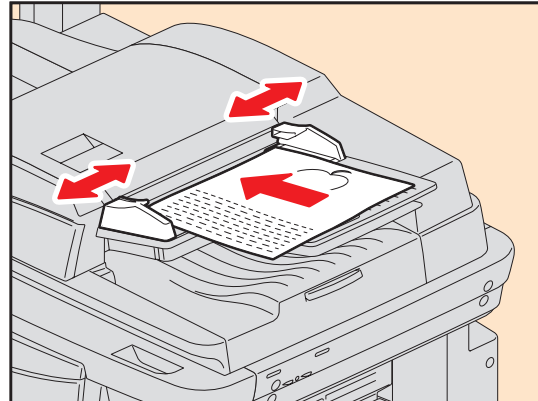 


## 2 Specify the location where the scanned data will be stored, and then press [SCAN] on the touch panel.



Refer to the **Scanning Guide** for details.
 
## In this case

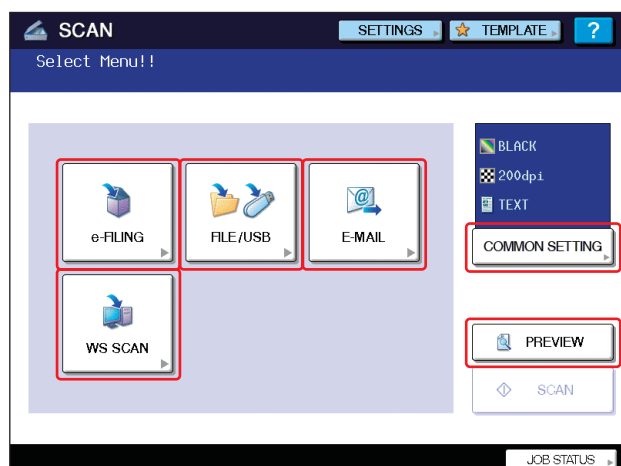**To store the scanned data in e-Filing**

Press [e-FILING] on the touch panel. Refer to "Chapter 2 BASIC OPERATION" in the **Scanning Guide** and "Chapter 2 OPERATIONS WITH THIS EQUIPMENT" in the **e-Filing Guide** for details.

**To store the scanned data in a shared folder or USB device**

 
Press [FILE/USB] on the touch panel. Refer to "Chapter 2 BASIC OPERATION" in the **Scanning Guide** for details.

**To send the scanned data to the specified E-mail address**

Press [E-MAIL] on the touch panel. Refer to "Chapter 2 BASIC OPERATION" in the **Scanning Guide** for details.

**To perform Web Service Scan**

Press [WS SCAN] on the touch panel. Refer to "Chapter 2 BASIC OPERATION" in the **Scanning Guide** for details.

**To set the scanning conditions**

Press [COMMON SETTING] on the touch panel. Refer to "Chapter 3 ADVANCED FUNCTIONS" in the **Scanning Guide** for details.

**To preview scanning data**

Press [PREVIEW] and then [SCAN] on the touch panel. Refer to "Chapter 3 ADVANCED FUNCTIONS" in the **Scanning Guide** for details.

1

2

3

4

5

# Basic e-Filing Operation

 
The basic e-Filing procedure is as follows. Press the [e-FILING] button to use the e-filing functions.

## Storing documents


The originals are stored as e-Filing documents in this equipment as well as being copied.

### 1 Place the original(s).

Original glass

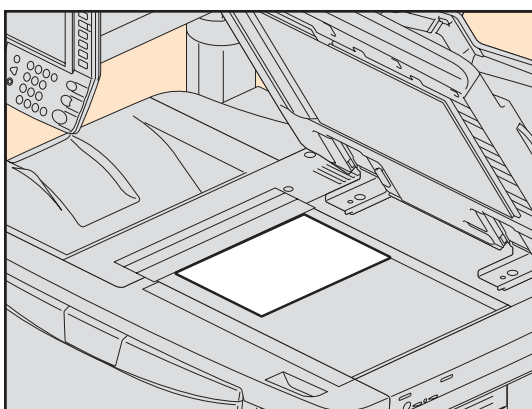


Reversing Automatic Document Feeder

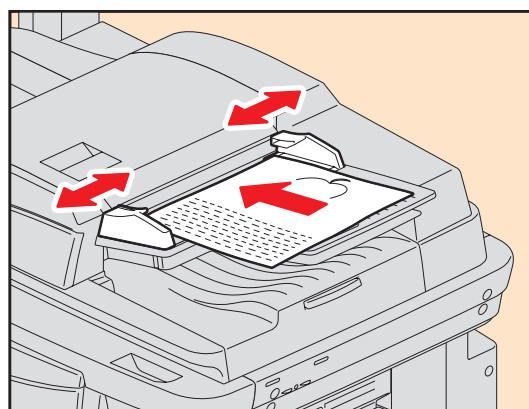 

### 2 Press [STORAGE] on the touch panel in the basic menu for the copying functions.
 
### 3 Press [STORE TO E-FILING] on the touch panel to select the box in which you want to store the data, and then press the [START] button on the control panel.

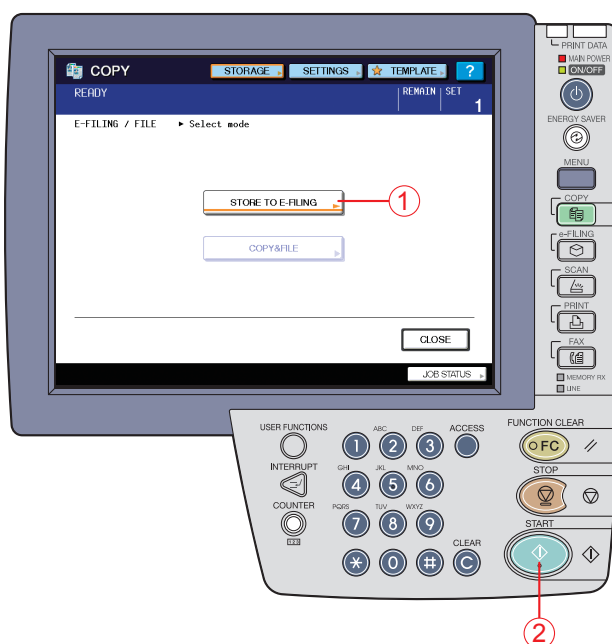

#### Tip

You can store documents not only by copying them but also by scanning them or using the printer driver. Refer to the **Scanning Guide** or **Printing Guide** for details.



# Printing Documents

The procedure for printing documents stored in e-Filing is as follows.

- 1 Press the box button in which the documents are stored.



If the password is set in the box, enter the password and press [OK] on the touch panel.

- 2 Select the document you want to print, and then press [PRINT] on the touch panel.



 
If the document is stored in a folder, select the folder and then press [OPEN] on the touch panel.

Refer to the **e-Filing Guide** for details.


# Basic Printing Operation

The procedure for printing with a PS3 printer driver from a Windows application is as follows.


- 1 Select [Print] in the [File] menu of the application.
- 2 Select the printer driver of the equipment, and then click [Preferences].

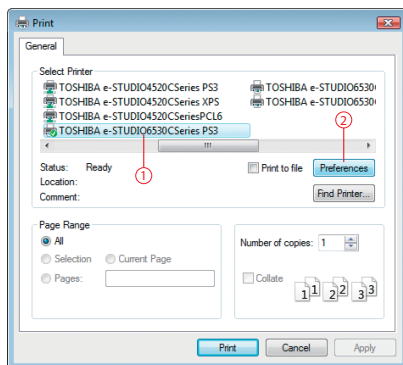

 - 3 Set the print options and click [OK].

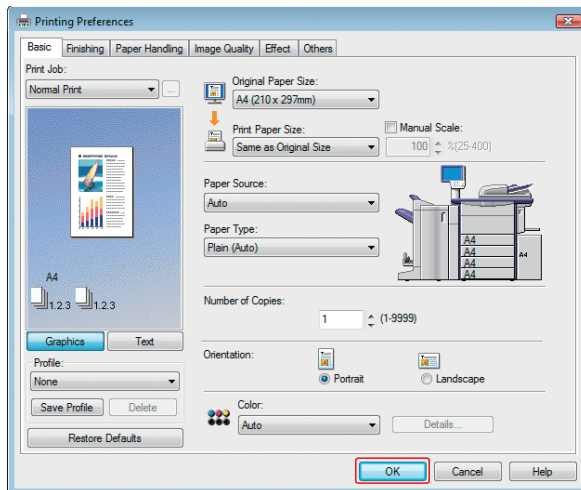


- 4 Click [Print].

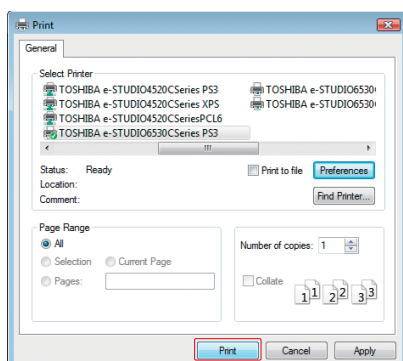 

Refer to the **Printing Guide** for details.

## In this case

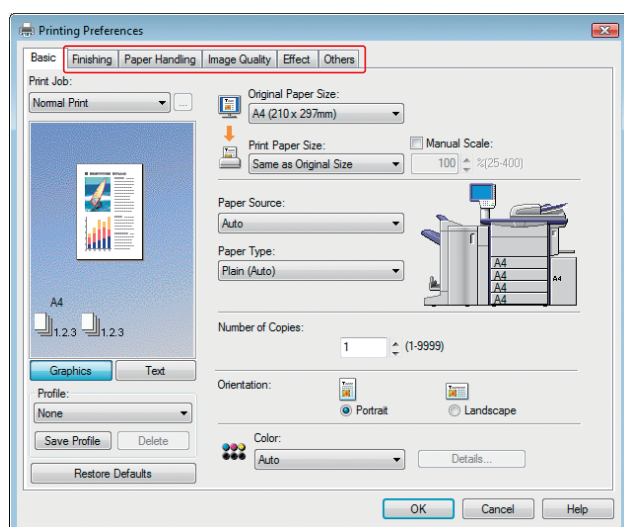 

### To specify paper size or number of copy sets

Click the [Basic] tab in the property dialog box of the printer driver. Refer to “Chapter 2 PRINTING FROM WINDOWS” in the *Printing Guide* for details.

### To specify 2-sided printing or N-up printing

Click the [Finishing] tab in the property dialog box of the printer driver. Refer to “Chapter 2 PRINTING FROM WINDOWS” in the *Printing Guide* for details.

### To specify Destination or Front cover printing

Click the [Paper Handling] tab in the property dialog box of the printer driver. Refer to “Chapter 2 PRINTING FROM WINDOWS” in the *Printing Guide* for details.

### To adjust Image Quality

Click the [Image Quality] tab in the property dialog box of the printer driver. Refer to “Chapter 2 PRINTING FROM WINDOWS” in the *Printing Guide* for details.

### To print with character strings or graphics on the background of the paper

Click the [Effect] tab in the property dialog box of the printer driver. Refer to “Chapter 2 PRINTING FROM WINDOWS” in the *Printing Guide* for details.

### To set not to print blank pages

Click the [Others] tab in the property dialog box of the printer driver. Refer to “Chapter 2 PRINTING FROM WINDOWS” in the *Printing Guide* for details.

1

2

3

4

 
5

# Basic Menu Operation

When the [MENU] button on the control panel is pressed, templates are displayed.

When the department management and user management are enabled, logging in the equipment and pressing the [MENU] button on the control panel display the template group last used on the menu. Refer to the **Copying Guide** and the **TopAccess Guide** for details.

- The first page of the images in the template group last used by the user who has logged in is displayed.
- In order to display the template or counter information for the individual needs of users, department management and user management are required to be set.

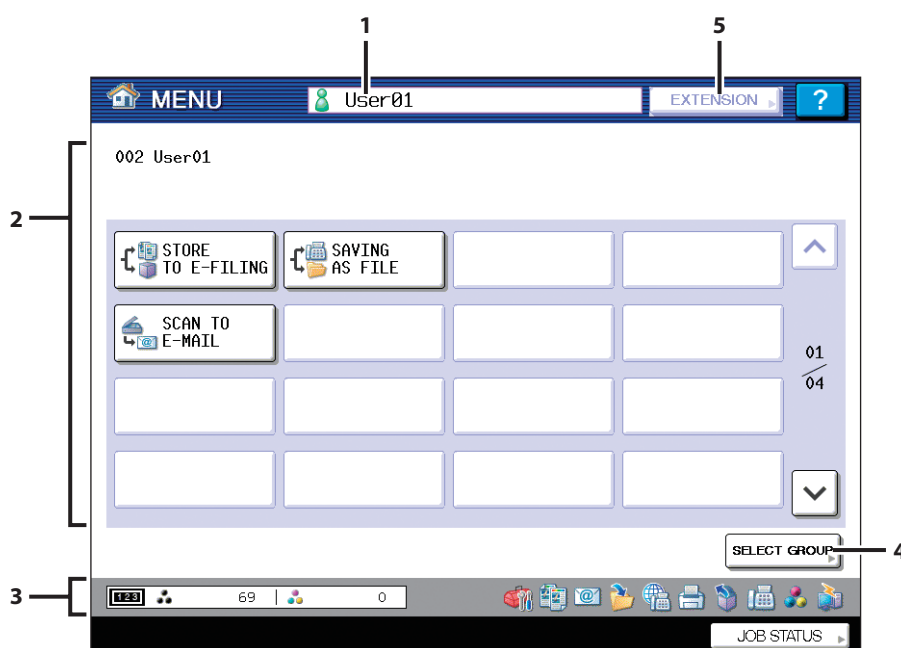

- 1. User name display area**  
The name of the user logging in is displayed.
- 2. Template display area**  
The template which the user logging in can use is displayed.
- 3. Total print counter**  
The total print counter (Black/Full color) of the user logging in is displayed.
- 4. [SELECT GROUP] button**  
The group of the template is changed.
- 5. [EXTENSION] button**  
This is enabled when the External Interface Enabler (GS-1020) is installed. Contact your service technician or Toshiba product distributors for details.

## Note

When department management and user management are not used, the template in the public template group and the total print counter in the equipment are displayed.

 
# Chapter 3

## REPLACEMENT OF SUPPLIES


Replacing Toner Cartridge.....	44
Replacing Waste Toner Box.....	45
Adding Staples.....	46

# Replacing Toner Cartridge


The procedure for replacing the toner cartridge is as follows.

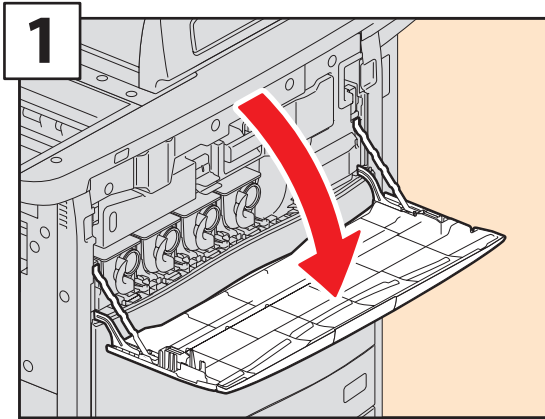


Open the front cover.

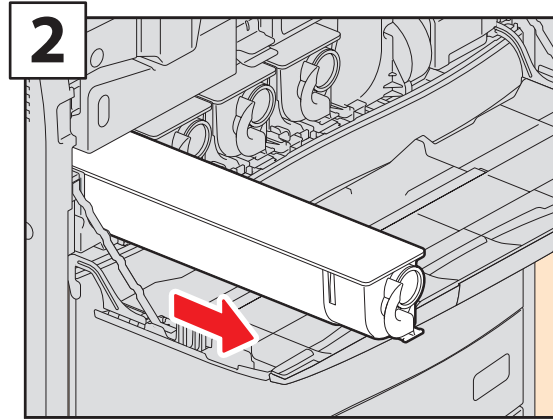 

 
Remove the color toner cartridge you want to replace.

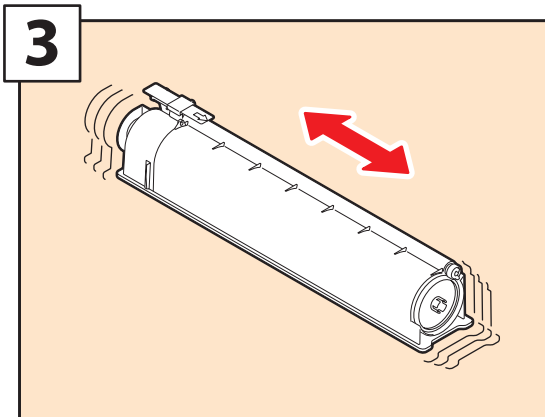

 
Shake the new toner cartridge well to loosen the toner inside.

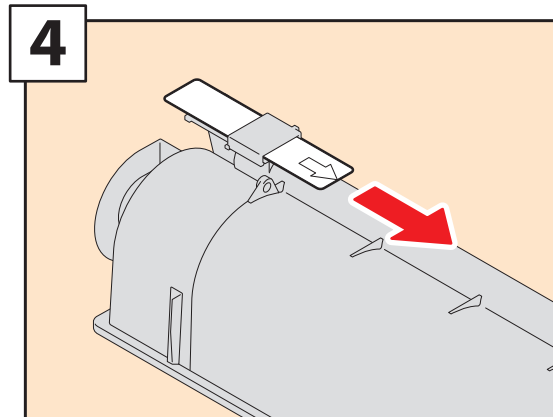

Pull out the seal.

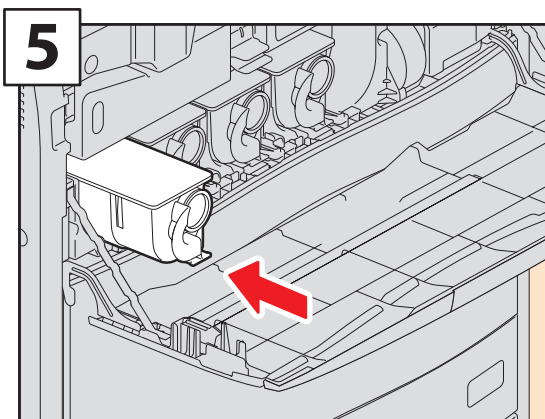 

Install the new toner cartridge.

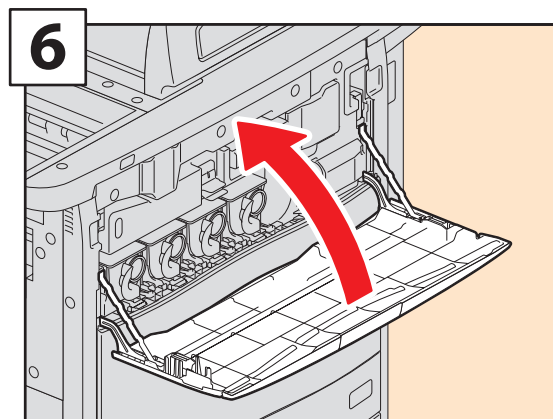 


Close the front cover.


Refer to the **Troubleshooting Guide** for details.

# Replacing Waste Toner Box

 
The procedure for replacing the waste toner box is as follows.

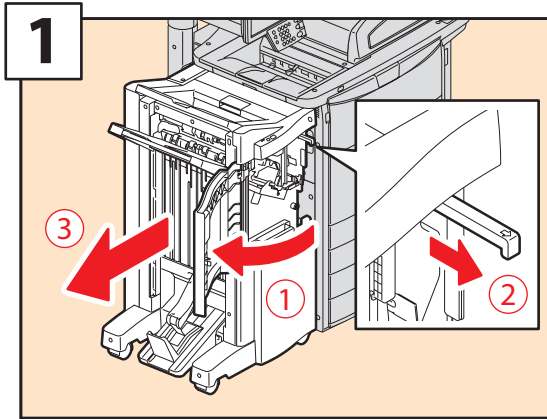

 
Open the front cover of the Finisher, pull the knob to unlock the Finisher, and then separate the Finisher.

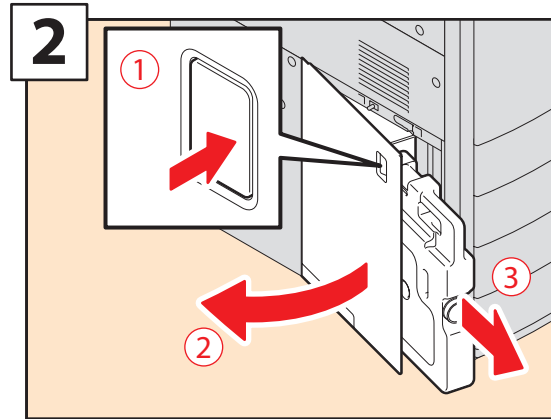

 
Open the waste toner box cover and remove the waste toner box.

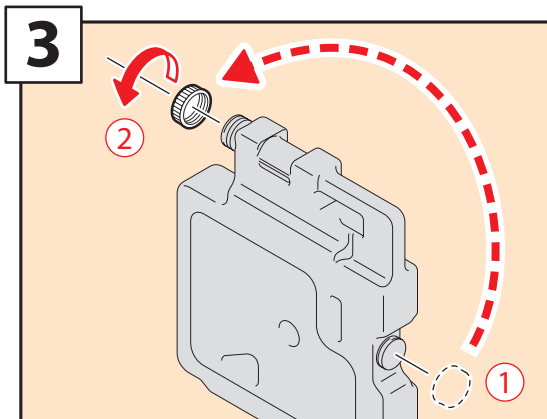

 Screw the lid on the opening of the waste toner box.

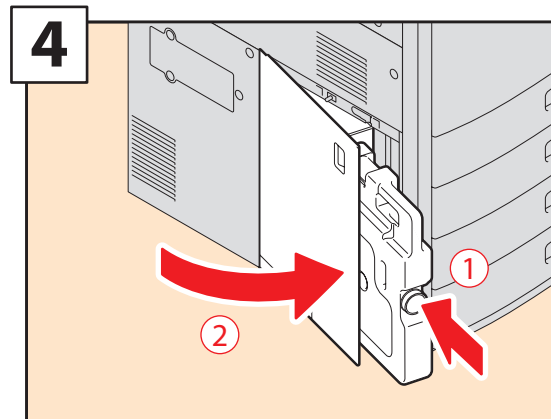

 Set a new waste toner box and close its cover.

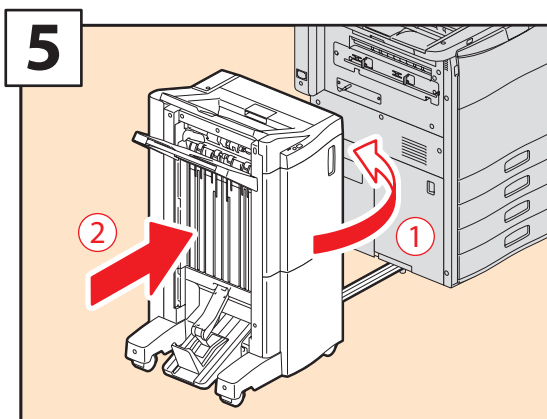

Close the front cover of the Finisher and connect the Finisher to the equipment.

## Note

The knob of step 1 is inside the cover of the Hole Punch Unit when it is installed.

Refer to the **Troubleshooting Guide** for details.

1

2

3

 
4

5


# Adding Staples

The procedure for adding staples of the Finisher (optional) is as follows.


## Finisher (Optional: MJ-1103/MJ-1104)

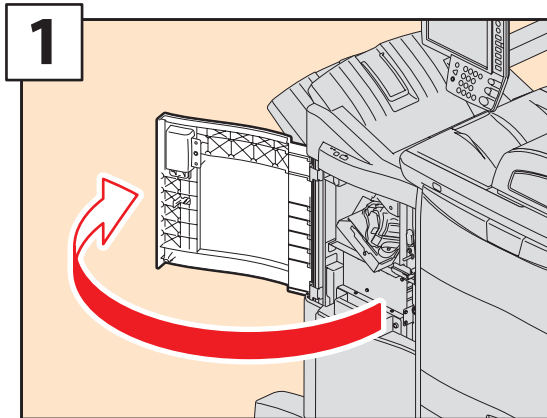


Open the front cover of the Finisher.

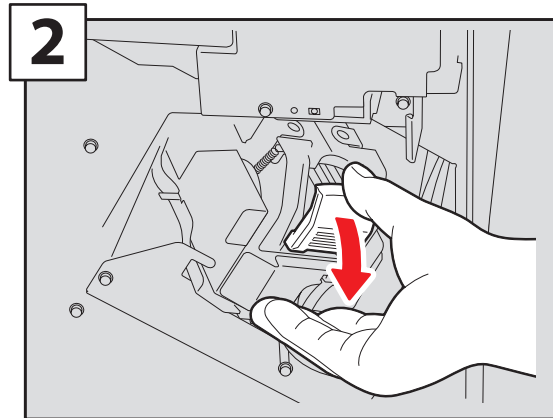 


Take off the staple cartridge.

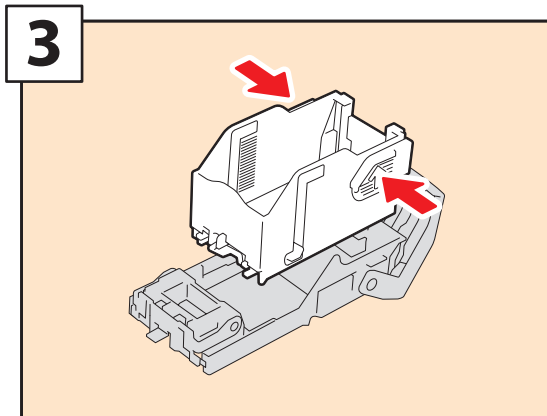 

 
Take the empty staple case out of the staple cartridge.

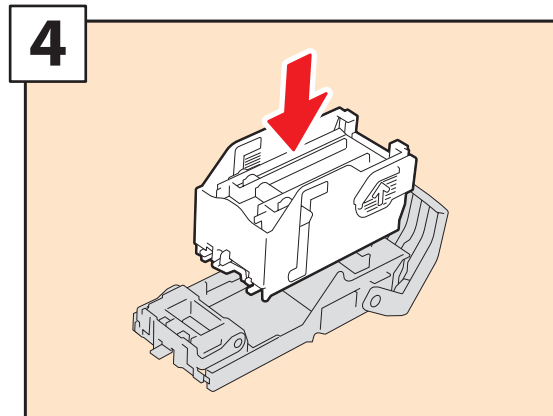

 Install a new staple case into the staple cartridge.

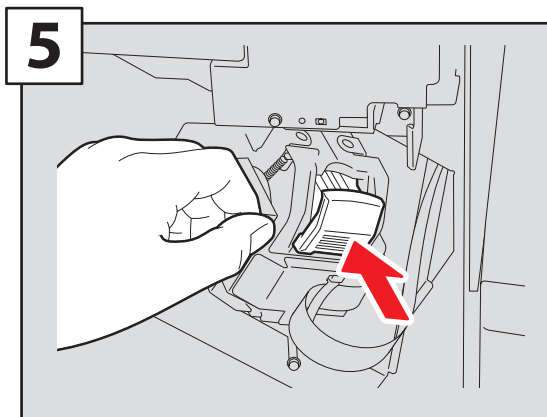


Install the staple cartridge.

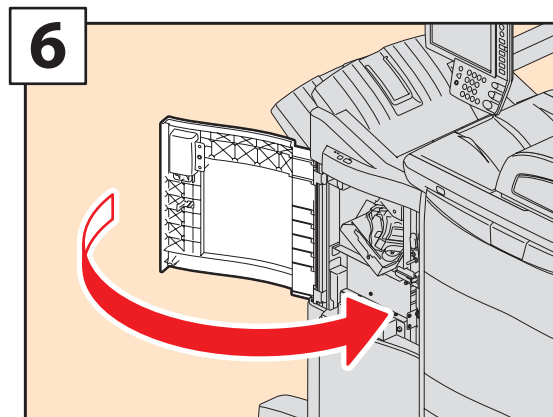 


Close the front cover of the Finisher.




## Saddle stitch unit (Optional: MJ-1104)

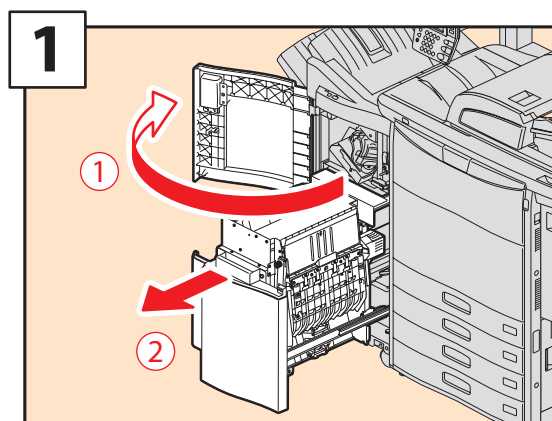 

 
Open the front cover of the Finisher, and then pull out the saddle stitch unit.

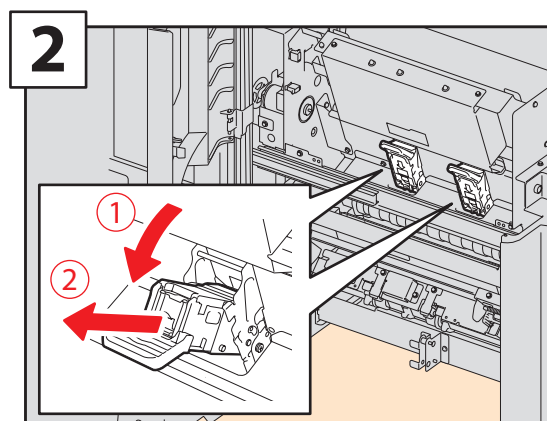


Take out two empty staple cartridges.

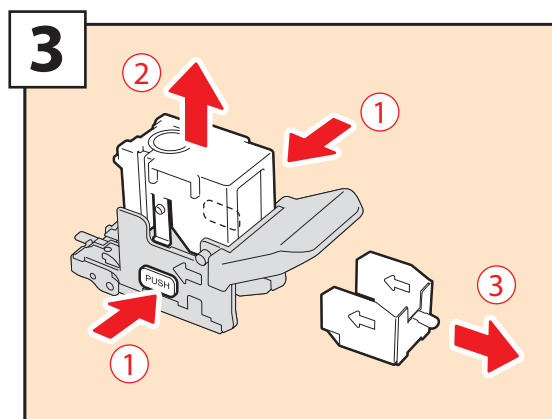 

 
Take the empty staple case out of the staple cartridge.

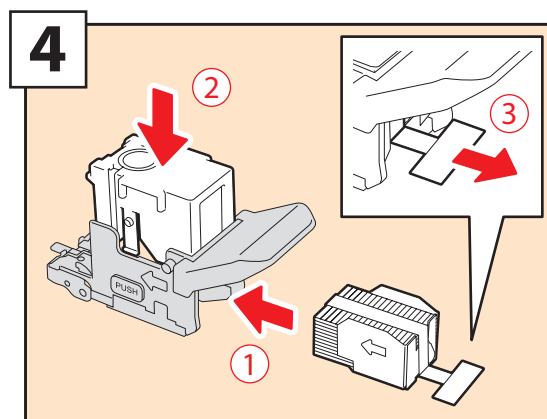

 Install a new staple case into the staple cartridge and remove the seal bundling the staples.

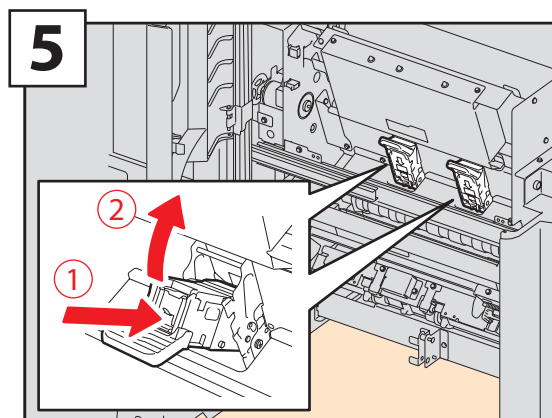

Install two new staple cartridges.

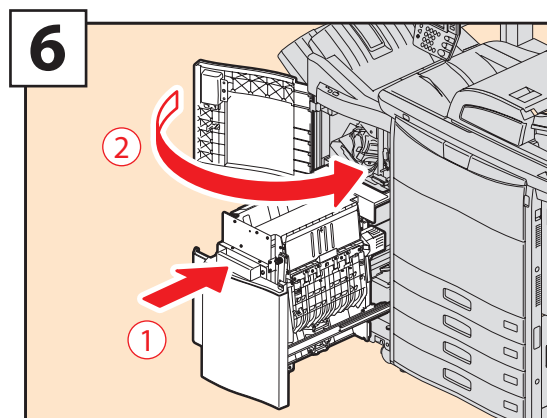 

Insert the saddle stitch unit into the Finisher, and then close the front cover of the Finisher.

Refer to the **Troubleshooting Guide** for details.



# Chapter 4

## ADVANCED FUNCTIONS / TROUBLESHOOTING

Advanced Functions .....	50
Messages or Other Indications on Touch Panel .....	58

# Advanced Functions

This section describes the advanced functions.

COPY

 
FAX

SCAN

e-FILING

PRINT


## Making a booklet stapled at the center in 2-sided printing

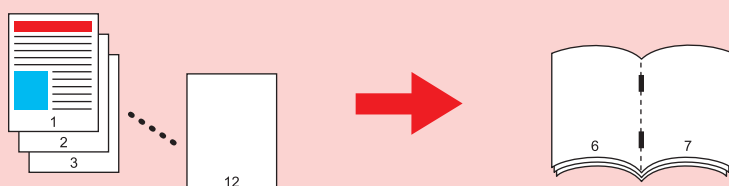


### EXAMPLE

How to print 12 pages of a A4 (LT) size file in 2- sided printing so that each 2 pages are printed on 1 A3 (LD) sheet, and then stapled at the center for making 10 sets of booklet type prints is described as follows. The Saddle Stitch Finisher (optional, MJ-1104) is required.

 1. Open a file to be printed, and then select [Print] from the file menu of the application.
2. Select the printer driver of this equipment, and then click [Preferences].
3. Set "A4 (LT)" for the Original Paper Size, "A3 (LD)" for Print Paper Size and "10" for Number of Copies in the [Basic] tab menu.
4. Set the [Finishing] tab menu.
  - 1) Select the "2-Sided Printing" check box.
  - 2) Select "Booklet".
  - 3) Click [Details].

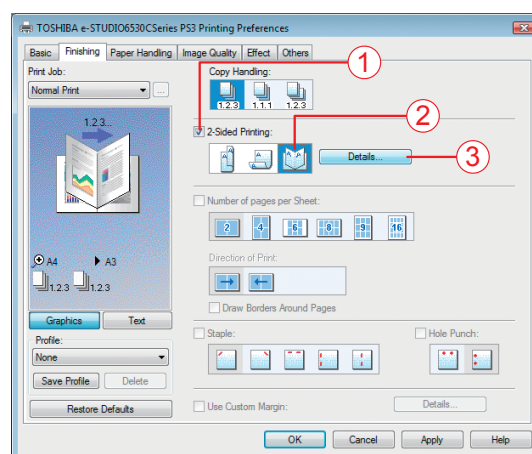

 5. Set the Booklet Details dialog box.
  - 1) Select "A4 on A3 (LT on LD)" for "Output Document Layout".
  - 2) Select "From Left to Right" for "Page Order".
  - 3) Select the "Staple Down the Center" check box.
  - 4) Click [OK].

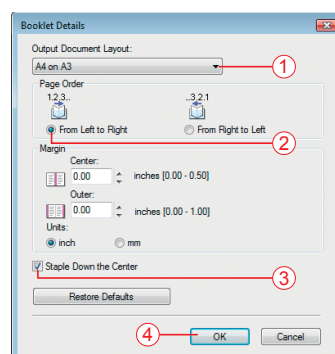

6. Click [OK] to return to the Print dialog box, and then click [OK].

For details, refer to the **Printing Guide**.

COPY


FAX

SCAN

e-FILING

PRINT

## Copying different-sized originals and stapling copies

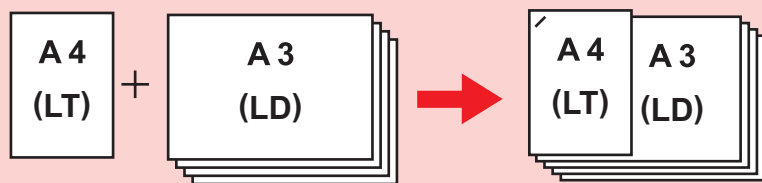 


### EXAMPLE

The procedure of how to copy 5 sets of different-sized originals (A4 or LT: 1 sheet, A3 or LD: 4 sheets) and staple the copies is as follows. The Finisher (optional) is required.


1. Place the originals on the Reversing Automatic Document Feeder.
2. Press [ZOOM] on the touch panel.
3. Press [MIXED SIZE] and then [RETURN].

### Note

 If you want to copy different-sized originals and staple the copies, select only those having the same width.

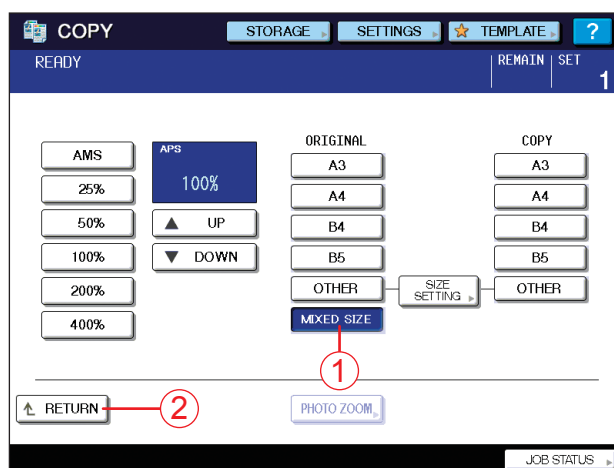

 4. Press [FINISHING] on the touch panel.
5. Press [FRONT STAPLE] and then [RETURN].

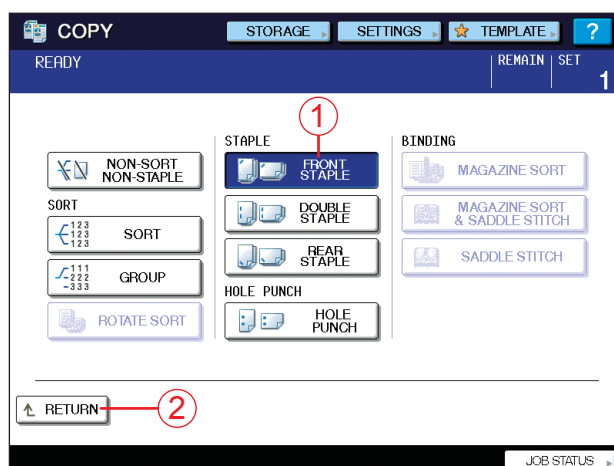

6. Key in 5 for the number of copy sets, and then press the [START] button on the control panel.

For details, refer to the **Copying Guide**.

1

2

3

4

5

COPY


FAX

SCAN

e-FILING

PRINT

## Attaching the scanned data to an E-mail.

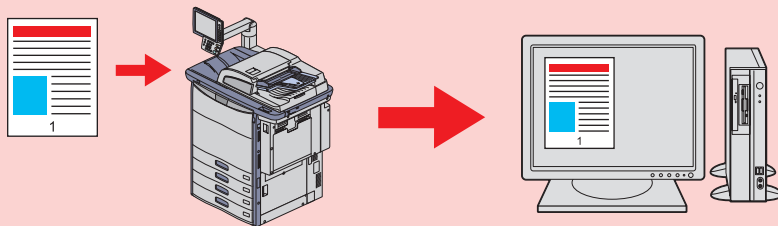 

### EXAMPLE

The procedure for attaching the scanned data to an E-mail and sending it to the specified E-mail address is as follows.

1. Place the original(s).
2. Press [E-MAIL] on the touch panel.
3. Specify the E-mail address and then [OK].

Press [START] to start scanning

user01@aaa.aaa 0002

INPUT @ DESTINATION

001 User 01	005 User 05
002 User 02	006 User 06
003 User 03	007 User 07
004 User 04	008 User 08

ALL CLEAR KNOWN ID SEARCH

CANCEL OK

JOB STATUS

4. Define the settings for the file as required.
5. Press [SCAN] on the touch panel.

SCAN SETTINGS TEMPLATE ?

Select Menu!!  
Press SCAN to start scanning

e-FILING FILE/USB E-MAIL WS SCAN

BLACK 200dpi TEXT COMMON SETTING

PREVIEW SCAN

JOB STATUS

For details, refer to the **Scanning Guide**.

COPY

 
FAX

SCAN

e-FILING

PRINT

## Requesting a password for receiving a fax

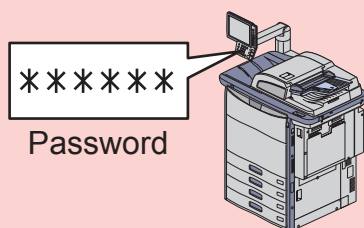


### EXAMPLE

The procedure for requesting a password when printing a received Fax using the ITU-T mailbox function is as follows. The Fax Unit (optional) is required.

1. Press the [ADVANCED] tab, and then [ITU MAILBOX].
2. Press [CONFIDENTIAL], [POLLING], and then [OK].



 3. Enter the box number (maximum of 20 digits) and password, and then press [OK].

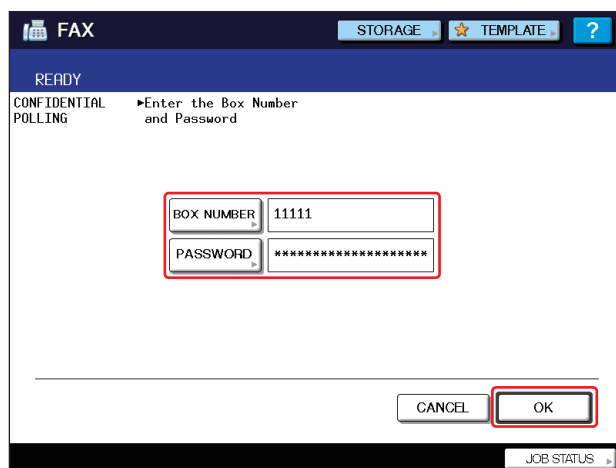

4. Press the [START] button on the control panel.

### Note

Previous setting is required for using the ITU-T Mailbox function.

For details, refer to the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit**.

1

2

3

4

5

COPY

 
FAX

SCAN

e-FILING

PRINT


## Copying or scanning originals without blank sheets

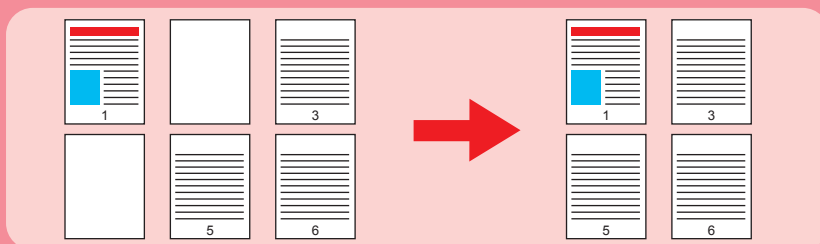


### EXAMPLE

To copy or scan originals without blank sheets, follow the setting below before copying or scanning them. (In this case, two blank originals are omitted when six originals are copied or scanned.)


### When copying

 1. Press the [EDIT] tab, and then press  on the touch panel in the basic menu for the copying functions.
2. Press [OMIT BLANK PAGE] and then [OK].

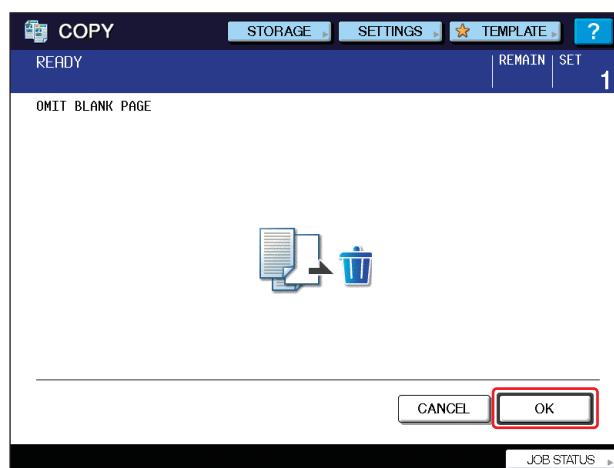

### When scanning

 1. Press [COMMON SETTING], and then press  in the basic menu for the scanning functions.
2. Press [ON] in the "OMIT BLANK PAGE" setting and then [OK].

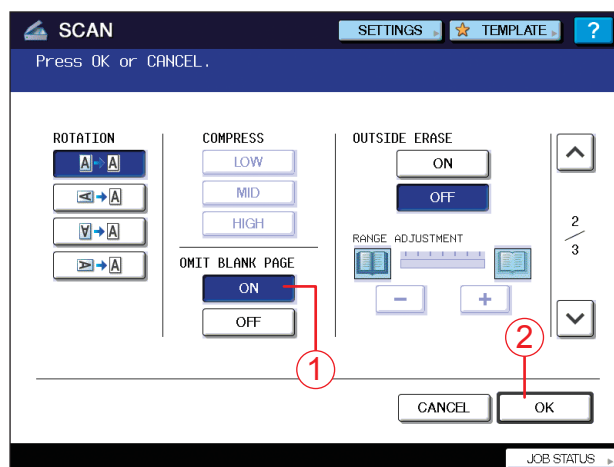

For details, refer to the **Copying Guide** and **Scanning Guide**.



COPY


FAX

SCAN

e-FILING

PRINT


## Adding date and time to document files

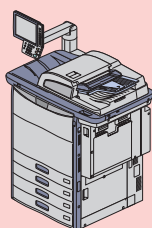 


### EXAMPLE

The procedure for printing a document file stored in e-Filing with the date and time added at its bottom is as follows.

 1. Select the box in which the desired document is stored.
2. Select the document, and then press [SETTINGS].

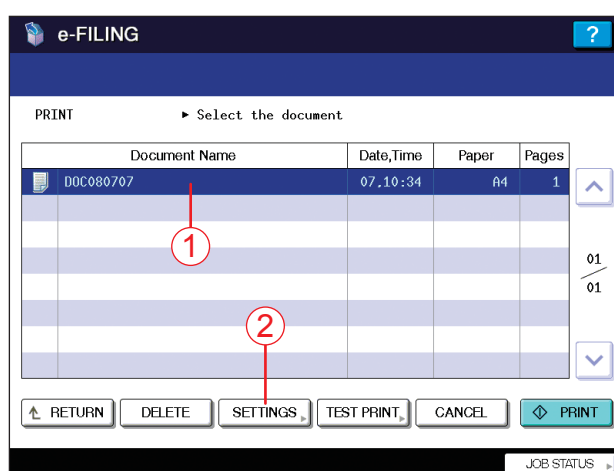

 3. Press [TIME STAMP].
4. Press [LOWER], and then [OK].

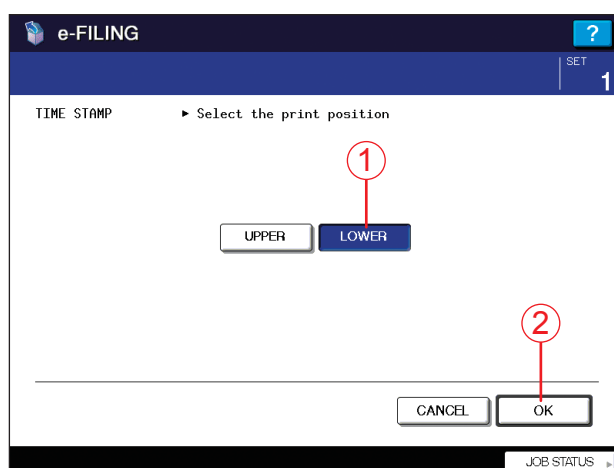

5. Press [PRINT].

For details, refer to the **e-Filing Guide**.

1

2

3

4

5

COPY


FAX

SCAN

e-FILING

PRINT


## Printing a PDF file stored in the USB device.

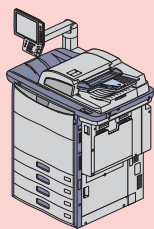 


### EXAMPLE

The procedure for printing 1 set of a PDF file stored in the USB device is as follows.

 1. Connect the USB device to the USB port.

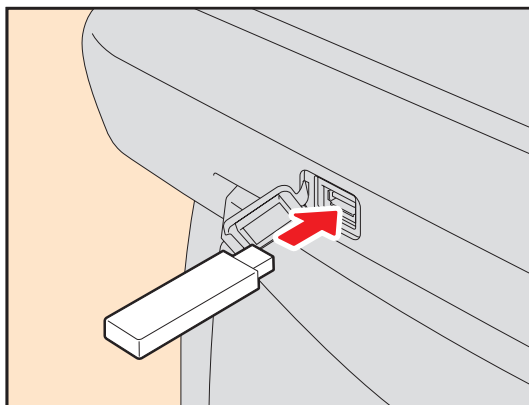

 2. Press the [PRINT] button on the control panel.
3. Press [USB] on the touch panel.
4. Select a PDF file to be printed, and press [PRINT] on the touch panel.

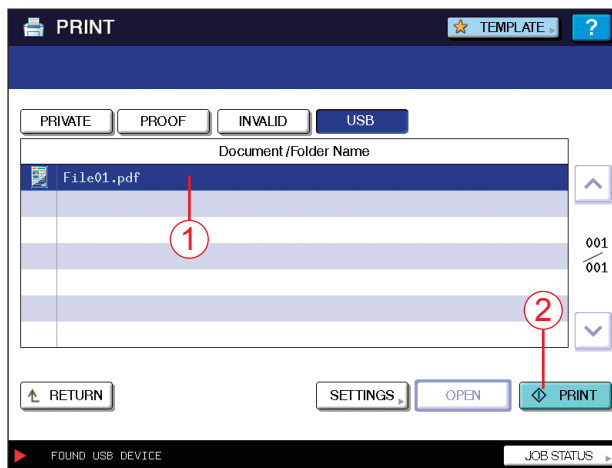

For details, refer to the *Printing Guide*.

COPY


FAX

SCAN

e-FILING

PRINT

## Copying or scanning originals which are to have their periphery whitened

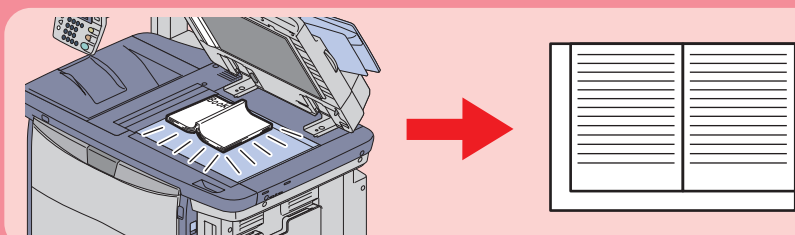 


### EXAMPLE

To whiten the dark area on the copied image around thick originals such as booklets, follow the setting below before copying or scanning originals.


### When copying

 1. Press the [EDIT] tab, and then  on the basic menu for the copying functions.
2. Press [OUTSIDE ERASE] and then [OK].

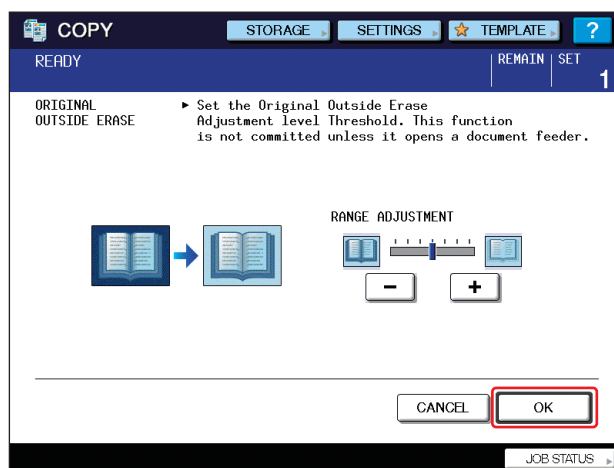

### When scanning

 1. Press [COMMON SETTING], and then  in the basic menu for the scanning functions.
2. Press [ON] in the "OUTSIDE ERASE" setting and then [OK].

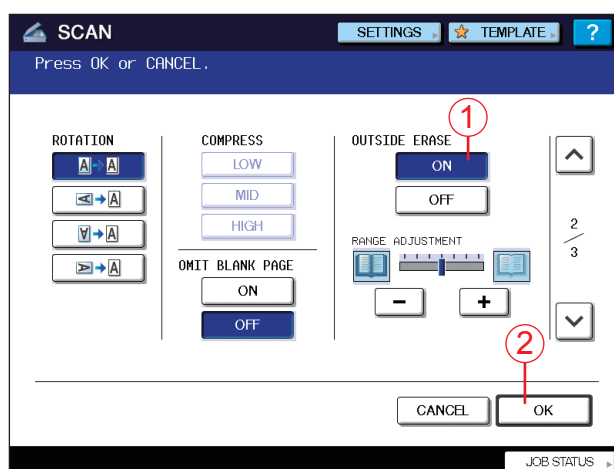

For details, refer to the **Copying Guide** and **Scanning Guide**.

1

2

3

4


5

# Messages or Other Indications on Touch Panel

 This section describes the messages, symbols and error codes displayed on the touch panel of the equipment.


## Alert message indication area

Messages appear when paper has run out, etc.

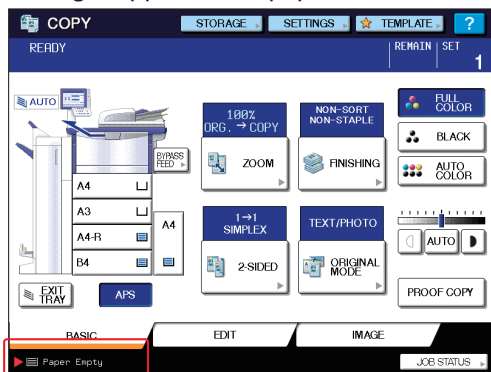


## Symbols blinking on the touch panel

 Symbols such as paper jam, call service, etc. may blink on the touch panel.

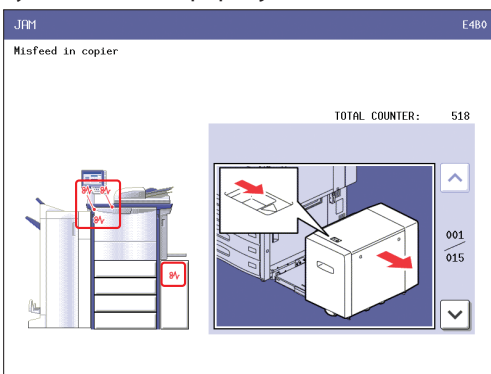

## Error codes

 When you press [JOB STATUS], and then the [LOG] tab on the touch panel, the LOG menu is displayed. The job history of this equipment and error codes are displayed in the LOG menu.

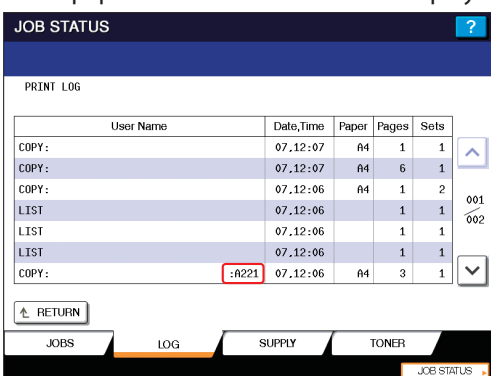

For details, refer to the **Troubleshooting Guide**.

# **Chapter 5**

## **MAINTENANCE & SPECIFICATIONS**

Regular Maintenance .....	60
Specifications of Equipment.....	61
Specifications of Options.....	65

 
# Regular Maintenance

The cleaning method for the equipment is as follows.

We recommend you to clean the following items weekly, so that the originals can be scanned in unsoiled conditions. Be careful not to scratch the parts that you are cleaning.

## Notes

- Be careful not to scratch the portions in cleaning.
- Do not use such solvents as thinner or alcohol when cleaning the surface of the equipment.
  - This could warp the shape of the surface or leave it discolored.
  - When using a chemical cleaning pad to clean it, follow the instruction.

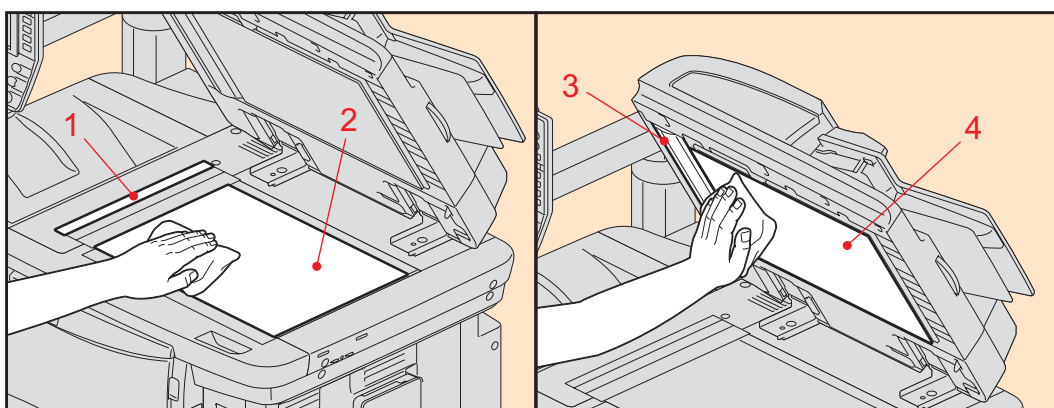

### 1. Scanning area (surface of the long rectangular glass)

Wipe it with the accessory cloth or a soft dry cloth. If there are still stains remaining, wipe clean with a piece of soft cloth which has been moistened with water and then squeezed well. Do not use solvents such as alcohol.

### 2. Original glass

### 3. Guide

### 4. Platen sheet

Clean the surface as follows depending on the staining.

- Clean it with a soft cloth.
- Clean it with a soft cloth lightly moistened with water.
- Clean it with a soft cloth lightly moistened with alcohol, and then wipe it with a dry cloth.
- Clean it with a soft cloth lightly moistened with watered-down neutral detergent, and then wipe it with a dry cloth.

# Specifications of Equipment

The specifications of the equipment are as follows.

Acceptable paper					
Feeder	Media type		Weight	Maximum sheet capacity	Paper size
Drawers **	PLAIN	PLAIN1	64 - 80 g/m <sup>2</sup> 17 - 23 lb. Bond	Approx. 600 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 540 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)	AB format: A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm *8, 320 mm x 460 mm *8
		PLAIN2	81 - 105 g/m <sup>2</sup> 24 - 28 lb. Bond	Approx. 500 sheets	
	RECYCLED PAPER		64 - 105 g/m <sup>2</sup> 17 - 28 lb. Bond	Approx. 600 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 540 sheets (80 g/m <sup>2</sup> , 20 lb. Bond) Approx. 500 sheets (81 - 105 g/m <sup>2</sup> , 24 - 28 lb. Bond)	
	THICK1		106 - 163 g/m <sup>2</sup> - 90 lb. Index	Approx. 300 sheets	K format: 8K, 16K, 16K-R
	THICK2		164 - 209 g/m <sup>2</sup> - 110 lb. Index	Approx. 250 sheets	
	THICK3		210 - 256 g/m <sup>2</sup> - 140 lb. Index	Approx. 200 sheets	
Tandem Large Capacity Feeder	PLAIN	PLAIN1	64 - 80 g/m <sup>2</sup> 17 - 23 lb. Bond	Approx. 2500 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 2360 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)	A4, LT
		PLAIN2	81 - 105 g/m <sup>2</sup> 24 - 28 lb. Bond	Approx. 2000 sheets	
	RECYCLED PAPER		64 - 105 g/m <sup>2</sup>	Approx. 2500 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 2360 sheets (80 g/m <sup>2</sup> , 20 lb. Bond) Approx. 2000 sheets (81 - 105 g/m <sup>2</sup> , 24 - 28 lb. Bond)	
	THICK1		106 - 163 g/m <sup>2</sup> - 90 lb. Index	Approx. 1400 sheets	
	THICK2		164 - 209 g/m <sup>2</sup> - 110 lb. Index	Approx. 1000 sheets	
	THICK3		210 - 256 g/m <sup>2</sup> - 140 lb. Index	Approx. 800 sheets	
External Large Capacity Feeder (optional)	PLAIN	PLAIN1	64 - 80 g/m <sup>2</sup> 17 - 23 lb. Bond	Approx. 3000 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 2500 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)	A4, LT
		PLAIN2	81 - 105 g/m <sup>2</sup> 24 - 28 lb. Bond	Approx. 2200 sheets	
	RECYCLED PAPER		64 - 105 g/m <sup>2</sup>	Approx. 3000 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 2500 sheets (80 g/m <sup>2</sup> , 20 lb. Bond) Approx. 2200 sheets (81 - 105 g/m <sup>2</sup> , 24 - 28 lb. Bond)	
	THICK1		106 - 163 g/m <sup>2</sup> - 90 lb. Index	Approx. 1500 sheets	
	THICK2		164 - 209 g/m <sup>2</sup> - 110 lb. Index	Approx. 1200 sheets	
	THICK3		210 - 256 g/m <sup>2</sup> - 140 lb. Index	Approx. 1000 sheets	
Bypass tray	PLAIN	PLAIN1	64 - 80 g/m <sup>2</sup> 17 - 23 lb. Bond	Approx. 100 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 80 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)	AB format: A3, A4, A4-R, A5-R, A6-R *5, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm *8, 320 mm x 460 mm *8, 330 mm x 483 mm *8, *9
		PLAIN2	81 - 105 g/m <sup>2</sup> 24 - 28 lb. Bond	Approx. 80 sheets	
	RECYCLED PAPER		64 - 105 g/m <sup>2</sup>	Approx. 100 sheets (64 g/m <sup>2</sup> , 17 lb. Bond) Approx. 80 sheets (80 g/m <sup>2</sup> , 20 lb. Bond) Approx. 80 sheets (81 - 105 g/m <sup>2</sup> , 24 - 28 lb. Bond)	LT format: LD, LG, LT, LT-R, ST-R, COMP, 13" LG, 8.5" SQ, 12"x18", 13"x19" *8, *9
	THICK1		106 - 163 g/m <sup>2</sup> - 90 lb. Index	Approx. 40 sheets	K format: 8K, 16K, 16K-R
	THICK2 *2		164 - 209 g/m <sup>2</sup> - 110 lb. Index	Approx. 30 sheets	Non-Standard size (Copy): Length: 100 - 297 mm (3.9 - 11.7"), Width: 148 - 432 mm (5.8 - 17")
	THICK3		210 - 256 g/m <sup>2</sup> - 140 lb. Index	Approx. 30 sheets	
	THICK4 *3		257 - 300 g/m <sup>2</sup> - 110lb. Cover	Approx. 30 sheets *5	
	SPECIAL1, SPECIAL2 *4		230 g/m <sup>2</sup>	Approx. 30 sheets *6, *7	Non-Standard size (Print): Length: 100 - 313.4 mm (3.9 - 12.34"), Width:148 - 1200 mm (5.8 - 47.24") *10
TRANSPARENCY		—	Approx. 30 sheets *5	A4, LT	

\*1 Use the bypass tray when you want to make a copy on the back side of copied Thick 1, Thick 2 or Thick 3 paper.

\*2 For printing the sticker labels, select "THICK2" as the media type.

\*3 When duplex copying is performed on THICK4, black streaks may appear on the copied image. They are highly visible on an image with high or uneven density.

\*4 SPECIAL1 and SPECIAL2 represent "Waterproof paper"

\*5 Automatic duplex copying is not available.

\*6 For duplex copying, use paper available for duplex copying.

\*7 To copy on the back side of copied SPECIAL1 paper, place the sheets one by one on the bypass tray.

\*8 If an optional finisher has been installed, the receiving tray of the equipment, the upper receiving tray of the Finisher (MJ-1103) and the upper receiving tray of the Saddle Stitch Finisher (MJ-1104) are all available.

\*9 Note that black streaks may appear on the edge of the printed paper.

\*10 Paper can exit only on the receiving tray of the equipment.

1

2

3

4

5

### Paper only acceptable for printing functions

Feeder	Media type	Weight	Maximum sheet capacity	Paper size
Bypass tray	PLAIN	64 - 105 g/m <sup>2</sup> 17 - 28 lb. Bond	1sheet <sup>*1,*2</sup>	Length: 466 mm (18.35") - 1200 mm (47.24")
	THICK1	106 - 163 g/m <sup>2</sup> - 90 lb. Index		

\*1 Place the sheets one by one on the bypass tray.

\*2 Paper can exit only on the receiving tray of the equipment.

### Recommended paper for each media type

Media type	Toshiba recommendations/Manufacturer		Weight
PLAIN1	A/B format:	TGIS Paper/mondi	80 g/m <sup>2</sup>
	LT format:	TIDAL MP/Hammermill	20 lb. Bond
PLAIN2	A/B format:	ColorCopy/mondi	90 g/m <sup>2</sup> , 100 g/m <sup>2</sup>
	LT format:	Laser Print/Hammermill	24 lb. Bond
		Color Copy Paper/Hammermill	28 lb. Bond
THICK1	A/B format:	ColorCopy/mondi	120 g/m <sup>2</sup> , 160 g/m <sup>2</sup>
	LT format:	Color Copy Paper/Hammermill	32 lb. Bond
			60 lb. Cover
THICK2	A/B format:	ColorCopy/mondi	200 g/m <sup>2</sup>
		3478 (label)/ZWECK-AVERY <sup>*2</sup>	—
	LT format:	5165 (label)/AVERY <sup>*2</sup>	
THICK3	A/B format:	ColorCopy/mondi	220 g/m <sup>2</sup> , 250 g/m <sup>2</sup>
	LT format:	Color Copy Cover/Hammermill	80 lb. Cover
THICK4	A/B format:	ColorCopy/mondi	280 g/m <sup>2</sup> , 300 g/m <sup>2</sup>
	LT format:	Color Copy Cover/Hammermill	100 lb. Cover
SPECIAL1 <sup>*1</sup>	A/B format:	Water Proof Paper Duplex/TOMOEGAWA PAPER	230 /m <sup>2</sup>
	LT format:	Premium Speciality Paper (Glossy.Two-sided Weather Resistance Paper)/TOMOEGAWA PAPER	
SPECIAL2 <sup>*2</sup>	LT format:	AquaAce/Verbatim	
TRANSPARENCY <sup>*3</sup>	A/B format:	BG72/FOLEX	—
	LT format:	CG3700/3M	

\*1 When paper is exiting, remove it every time about 10 sheets have accumulated on the receiving tray or the tray of the Finisher (optional).

\*2 Automatic duplex copying is not available.

\*3 Only Toshiba-recommended transparency should be used. Using any other one may cause a malfunction.



## e-STUDIO5520C/6520C/6530C Specifications

<b>Model name</b>		FC-5520C/FC-6520C/FC-6530C
<b>Type</b>		Console type
<b>Original glass</b>		Fixed
<b>Printing (copying) system</b>		Indirect electro photographic method
<b>Developing system</b>		2-component magnetic brush developing
<b>Fixing method</b>		External heating STF fusing system
<b>Photosensor type</b>		OPC
<b>Original scanning system</b>		Flat surface scanning system (When the Reversing Automatic Document Feeder is installed: Fixed scanning system by feeding the original)
<b>Original scanning sensor</b>		Linear CCD sensor
<b>Scanning light source</b>		Xenon lamp
<b>Resolution</b>	<b>Scanning</b>	600 dpi x 600 dpi
	<b>Writing</b>	Black-and-white: 2400 dpi x 600 dpi Color, image smoothing: 600 dpi x 600 dpi, 8 bit
<b>Acceptable originals</b>		Sheets, books and 3-dimensional objects
<b>Acceptable original size</b>		Max. A3 or LD
<b>Acceptable copy paper size</b>	<b>Drawer</b>	A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm, 320 mm x 460 mm, LD, LG, LT, LT-R, ST-R, COMP, 13" LG, 8.5" SQ, 12" x 18", 8K, 16K, 16K-R
	<b>Bypass</b>	Paper size within 100 - 330 mm (5 1/2" - 12.99") (Length), 148 - 483 mm (8 1/2"-19.02") (Width) (For printing functions, within 466 mm - 1200 mm (18.35"-47.24") (width))
<b>Acceptable copy paper weight</b>	<b>Drawer</b>	64 - 256 g/m <sup>2</sup> (17 - 80 lb. Cover (140 lb. Index))
	<b>Bypass</b>	64 - 300 g/m <sup>2</sup> (17 - 110 lb. Cover)
<b>Warm-up time</b>		Approx. 180 seconds
<b>First copy time (A4 or LT portrait)</b>	<b>Black-and-white</b>	e-STUDIO5520C/6520C: 5.3 seconds e-STUDIO6530C: 4.6 seconds
	<b>Color</b>	6.5 seconds
<b>Continuous copy speed</b>		Refer to the Copying Guide.
<b>Multiple copying</b>		Up to 9999 copies (digital key entry)
<b>Excluded image width</b>	<b>Black-and-white</b>	Leading edge: 3.0±2.0 mm (0.12"±0.08"), Trailing edge: 3.0±2.0 mm (0.12"±0.08"), Both edge: 2.0±2.0 mm (0.08"±0.08")
	<b>Color</b>	Leading edge: 5.0±2.0 mm (0.20"±0.08"), Trailing edge: 3.0±2.0 mm (0.12"±0.08"), Both edge: 2.0±2.0 mm (0.08"±0.08")
	<b>Printer (Black- and-white/Color)</b>	Leading edge: 4.2 mm +2.8 mm - 1.2 mm (0.17" +0.11" -0.05"), Trailing edge: 4.2 mm +1.2 mm -2.8 mm (0.17" +0.05" -0.11"), Both edge: 4.2±2.0 mm (0.08"±0.08")
<b>Reproduction ratio</b>	<b>Actual size</b>	100±0.5%
	<b>Zoom</b>	25 - 400% (in 1% increments) For the Reversing Automatic Document Feeder 25 - 200% (in 1% increments)
<b>Paper Supply</b>	<b>Drawer</b>	Approx 540 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)
	<b>Bypass Tray</b>	Approx 100 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)
<b>Receiving tray loading capacity</b>		Approx 100 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)
<b>Toner density adjustment</b>		Magnetic auto-toner system and Pixel counter control
<b>Exposure control</b>		Automatic plus manual selection from 11 exposure step
<b>USB interface</b>		USB2.0 (Hi-Speed)
<b>Environment (for normal use)</b>		Temperature: 10 ° - 30 °C (50 ° - 86 °F), Humidity: 20 - 85% (No Condensation)
<b>Power requirements and Power consumption (including optional equipments)</b>		Europe AC 220 - 240 V±10%, 13 A (50/60Hz), 3.2 kW or less
		North America e-STUDIO6520C: AC 115 V±10%, 19 A (50/60Hz), 2.2 kW or less e-STUDIO6530C: AC 115 V±10%, 16 A (50/60Hz), 2.2 kW or less e-STUDIO5520C: AC 115 V±10%, 16 A (50/60Hz), 2.0 kW or less
		Saudi Arabia (100 V) e-STUDIO6520C: AC 127 V±10%, 19 A (50/60Hz), 2.2 kW or less e-STUDIO6530C: AC 127 V±10%, 16 A (50/60Hz), 2.2 kW or less e-STUDIO5520C: AC 127 V±10%, 16 A (50/60Hz), 2.0 kW or less
		Other AC 220 - 240 V±10%, 10 A (50/60Hz), 2.4 kW or less
		* Including Saudi Arabia 200 V

1

2

3

4

5

<b>Dimensions (equipment only)</b>	980 mm (38.58") (W) x 698 mm (27.48") (D) x 1590 mm (62.60") (H)
<b>Weight</b>	3-drawer model: Approx. 246 kg (542.3 lb) (equipment including drum) 4-drawer model: Approx. 249 kg (549 lb) (equipment including drum)
<b>Space occupied (equipment only)</b>	1560 mm (61.42") (W) x 778 mm (30.63") (D)
<b>Storage capacity</b>	Max. 1000 sheets or until the memory is full (Toshiba's own chart)

- This specification varies depending on the printing conditions and the environment.
- Specifications and appearance are subject to change without notice in the interest of product improvement.

## Reversing Automatic Document Feeder

<b>Copy sides</b>	1-side, Duplex
<b>Number of originals</b>	100 originals (80 g/m <sup>2</sup> , 20 lb. Bond) or 16 mm/0.63" or less in height (more than 80 g/m <sup>2</sup> , 20 lb. Bond)
<b>Feeding speed</b>	60 sheets/min. (600 dpi)
<b>Acceptable originals</b>	A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, ST-R, COMP (A5 and ST size are not acceptable)
<b>Paper weight</b>	1-sided original: 35 - 209 g/m <sup>2</sup> , 9.3 - 110 lb. Index 2-sided original: 50 - 157 g/m <sup>2</sup> , 13 - 40 lb. Bond
<b>Power source</b>	Supplied from the equipment

# Specifications of Options

The specifications of the options are as follows.

## External Large Capacity Feeder

<b>Model name</b>	MP-2501
<b>Acceptable paper size</b>	A4 or LT
<b>Paper weight</b>	64 - 256 g/m <sup>2</sup> , 17 - 140 lb. Index
<b>Maximum capacity</b>	2500 sheets (80 g/m <sup>2</sup> , 20 lb. Bond)(Height: Approx. 290 mm or 11.42")
<b>Power source</b>	Supplied from the equipment
<b>Dimensions</b>	326 mm (12.83") (W) x 610.5 mm (24.04") (D) x 464.5 mm (18.29") (H) (when installed to the equipment)
<b>Weight</b>	Approx. 28.5 kg (62.8 lb.) (including installing unit)

## Finisher

Model name	MJ-1103		MJ-1104	
Type	Floor type (Console type)			
Acceptable paper size	A3, A4, A4-R, A5-R, B4, B5, B5-R, FOLIO, 305 mm x 457 mm, 320 mm x 450 mm, 320 mm x 460 mm, 330 mm x 483 mm, LD, LG, LT, LT-R, ST-R, COMP, 8.5"SQ, 13"LG, 12" x 18", 13" x 19", 8K, 16K, 16K-R			
Acceptable paper weight	64 - 300 g/m <sup>2</sup> (17-110 lb. Cover)			
Number of copies stapled at a time (including 2 covers (64 - 256 g/m <sup>2</sup> , 17 lb. Bond to 140 lb. Index))	Paper size	80 g/m <sup>2</sup> 20 lb. Bond	90 g/m <sup>2</sup> 24 lb. Bond	105 g/m <sup>2</sup> 28 lb. Bond
	A4, B5, LT, 8.5"SQ, 16K	50 sheets	50 sheets	30 sheets
	A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP, 13"LG, 8K	30 sheets	30 sheets	15 sheets
Stapling position	Front, Rear, Double			
Saddle stitching	Not available		Available	
Number of copies saddle stitched at a time			A3, B4, A4-R, LD, LG, LT-R	
			80 g/m <sup>2</sup> 20 lb. Bond	90 g/m <sup>2</sup> 24 lb. Bond
			15 sheets	10 sheets
Power source	Supplied from the equipment			
Dimensions	647 mm (25.47") (W) x 598 mm (23.54") (D) x 1092 mm (42.99") (H)			
Weight	Approx. 40 kg (88.18 lb.)		Approx. 70 kg (154.3 lb.)	
Power consumption	100 W max.			

1

2

3

4

5

## Tray loading capacity of Finisher

Unit: mm (with allowable error of  $\pm 7$  mm or 0.28")Values in parentheses: Number of sheets (80g/m<sup>2</sup> or 20 lb. Bond)

### Upper Tray

With mixed paper not loaded	
Mode	Non-Sort
A4, A5-R, B5, LT, ST-R, 8.5"SQ, 16K	36.75 mm (250)
A3, A4-R, B4, B5-R, FOLIO, 305 mm x 457 mm, LD, LG, LT-R, COMP, 13"LG, 12"x18", 8K, 16K-R	18.4 mm (125)

### Lower Tray

With mixed paper not loaded			
Mode	Non-sort	Sort/Group	Staples loaded
A4, B5, LT, 8.5"SQ, 16K	350 mm (3000)	350 mm (3000)	Whichever of 150 copies or 2000 sheets is reached first
A3, A4-R, B4, FOLIO, LD, LG, LT-R, COMP, 13"LG, 8K	175 mm (1500)	175 mm (1500)	Whichever of 75 copies or 1000 sheets is reached first

- When mixed-size paper is loaded, the tray loading capacity should follow the specifications for larger paper sizes in the above tables.
- Refer to the **Copying Guide** for the tray loading capacity of the saddle stitch tray.

## Hole Punch Unit

<b>Model name</b>	MJ-6102 Series
<b>Acceptable paper size</b>	A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R
<b>Acceptable paper weight</b>	64 - 256 g/m <sup>2</sup> , 17 lb. Bond - 140 lb. Index (Transparencies or specially-treated paper are not available)
<b>Dimensions</b>	112 mm (4.41") (W) x 573 mm (22.56") (D) x 323 mm (12.72") (H) (excl. Lower cover)
<b>Weight</b>	Approx. 7 kg (15.4 lb.)

	Numbers of punching holes and hole diameter	Available paper size
Japan and most of Europe (MJ-6102E)	2 holes (6.5 mm or 0.26" dia.)	A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R
North America (MJ-6102N)	2/3 holes switchable (8.0 mm or 0.32" dia.)	2 holes: A4, B4, B5, B5-R, FOLIO, LT, LG, 13"LG, COMP, 8.5"SQ, 16K 3 holes: A3, A4, LD, LT, 8K, 16K
France (MJ-6102F)	4 holes (6.5 mm or 0.26" dia.; 80 mm or 3.15" pitch)	A3, A4-R, LT-R, LD, 8K, 16K
Sweden (MJ-6102S)	4 holes (6.5 mm or 0.26" dia.; 70 mm and 21 mm or 2.76 and 0.83" pitch)	A3, A4, A4-R, B4, B5, B5-R, FOLIO, LD, LG, LT, LT-R, COMP, 8.5"SQ, 13"LG, 8K, 16K, 16K-R

## FAX Unit

<b>Model Name</b>	GD-1270 (For FC-5520C/FC-6520C/FC-6530C)
<b>Size of Original</b>	A3, A4, A4-R, A5, A5-R, B4, B5, B5-R, FOLIO, LD, LT-R, LG, ST, ST-R, COMP
<b>Recording Paper Size</b>	297 mm - 420 mm (A3), 210 mm - 297 mm (A4), 148 mm - 210 mm (A5), 257 mm - 364 mm (B4), 182 mm - 257 mm (B5)
<b>Compatibility Communication Modes</b>	Exclusive Mode, ECM, G3
<b>Communication Resolution</b>	Horizontal: 8 dots/mm, 16 dots/mm, 300 dots/inch Vertical: 3.85 lines/mm, 7.7 lines/mm, 15.4 lines/mm, 300 dots/inch
<b>Transmission Rate</b>	33,600/31,200/28,800/26,400/24,000/21,600/19,200/16,800/14,400/12,000/9,600/7,200/4,800/2,400 bps
<b>Encoding Systems</b>	JBIG/MMR/MR/MH
<b>Printing Method</b>	Laser electronic printing
<b>Memory Capacity</b>	Transmission/Mailbox: 3.5 GB (HDD) Reception: 500 MB (HDD) *1
<b>Unit Type</b>	Desktop type, transmitting/receiving dual type
<b>Applicable Network</b>	Public Switched Telephone Network (PSTN)

\*1 For hard drives, MB means 1 million bytes. (Total HDD accessible capacity may vary depending on operating environment.)

Refer to the **GD-1250/GD-1260/GD-1270 Operator's Manual for FAX Unit** for details of the Fax Unit (GD-1270).

Toshiba-recommended paper is used for the values above. Specifications and appearance are subject to change without notice in the interest of product improvement.

# INDEX

## A, B

Acceptable paper .....	61
[ACCESS] button .....	17
Adding Staples .....	46
ALARM lamp .....	16
Alert message indication area .....	19, 58
Bridge unit .....	13
Bypass tray .....	12

## C, D

CD-ROM .....	9
[CLEAR] button .....	17
Client Software .....	10
Control panel .....	13, 16, 18
Control panel arm .....	13
[COPY] button .....	16
Copying .....	32, 51, 54, 57
[COUNTER] button .....	17
Date and time .....	19
Department code .....	25
Department management .....	25
Description of Each Component .....	12
Digital keys .....	17
Drawer .....	12
Duplexing unit .....	12

## E, F

e-Filing .....	38, 55
[e-FILING] button .....	16
[ENERGY SAVER] button .....	16
Energy saving mode .....	24
Error codes .....	58
[EXTENSION] button .....	42
External Large Capacity Feeder .....	14
[FAX] button .....	16
Faxing .....	34, 53
FAX Unit .....	14, 66
Finisher .....	14, 46, 65
Front cover .....	12
[FUNCTION CLEAR] button .....	16
Function display .....	19

## H, I, J

[Help] button .....	19
Hole Punch Unit .....	14, 66
[INTERRUPT] button .....	17
Items INCLUDED in This Product .....	8
[JOB STATUS] button .....	19

## M, N

MAIN POWER lamp .....	16
Main power switch .....	12
MEMORY RX / LINE lamps .....	16
Menu .....	42
[MENU] button .....	16
Message indication area .....	19
Network interface connector .....	12

## O, P

ON/OFF lamp .....	16
Operator's manual pocket .....	12
Options .....	14
Original glass .....	13
Original scale .....	13
Paper feed cover .....	12
Paper size indicator .....	12
Placing Paper .....	30

Platen sheet .....	13
[POWER] button .....	16
[PRINT] button .....	16
PRINT DATA lamp .....	16
Printing .....	40, 50, 56

## R, S

Receiving tray .....	13
Recommended paper .....	62
Regular Maintenance .....	60
Replacing Toner Cartridge .....	44
Replacing Waste Toner Box .....	45
Reversing Automatic Document Feeder .....	12, 64
Saddle Stitch Finisher .....	14
Saddle stitch unit .....	47
[SCAN] button .....	16
Scanning .....	36, 52, 54, 57
Scanning area .....	13
[SELECT GROUP] button .....	42
Setting letters .....	21
Shutdown .....	23
Specifications .....	63
Specifications of Options .....	65
[START] button .....	16
[STOP] button .....	16
Symbols .....	58

## T, U, W

Template display area .....	42
Toner cartridge .....	13
Total print counter .....	42
Touch panel .....	13, 17, 19
Turning the power OFF .....	23
Turning the power ON .....	22
USB port .....	13
USB terminal .....	12
[USER FUNCTIONS] button .....	17
User management .....	26
User name display area .....	42
Waste toner box .....	13

 




**MULTIFUNCTIONAL DIGITAL COLOR SYSTEMS**  
**Quick Start Guide**

---

**e-STUDIO5520c/6520c/6530c**

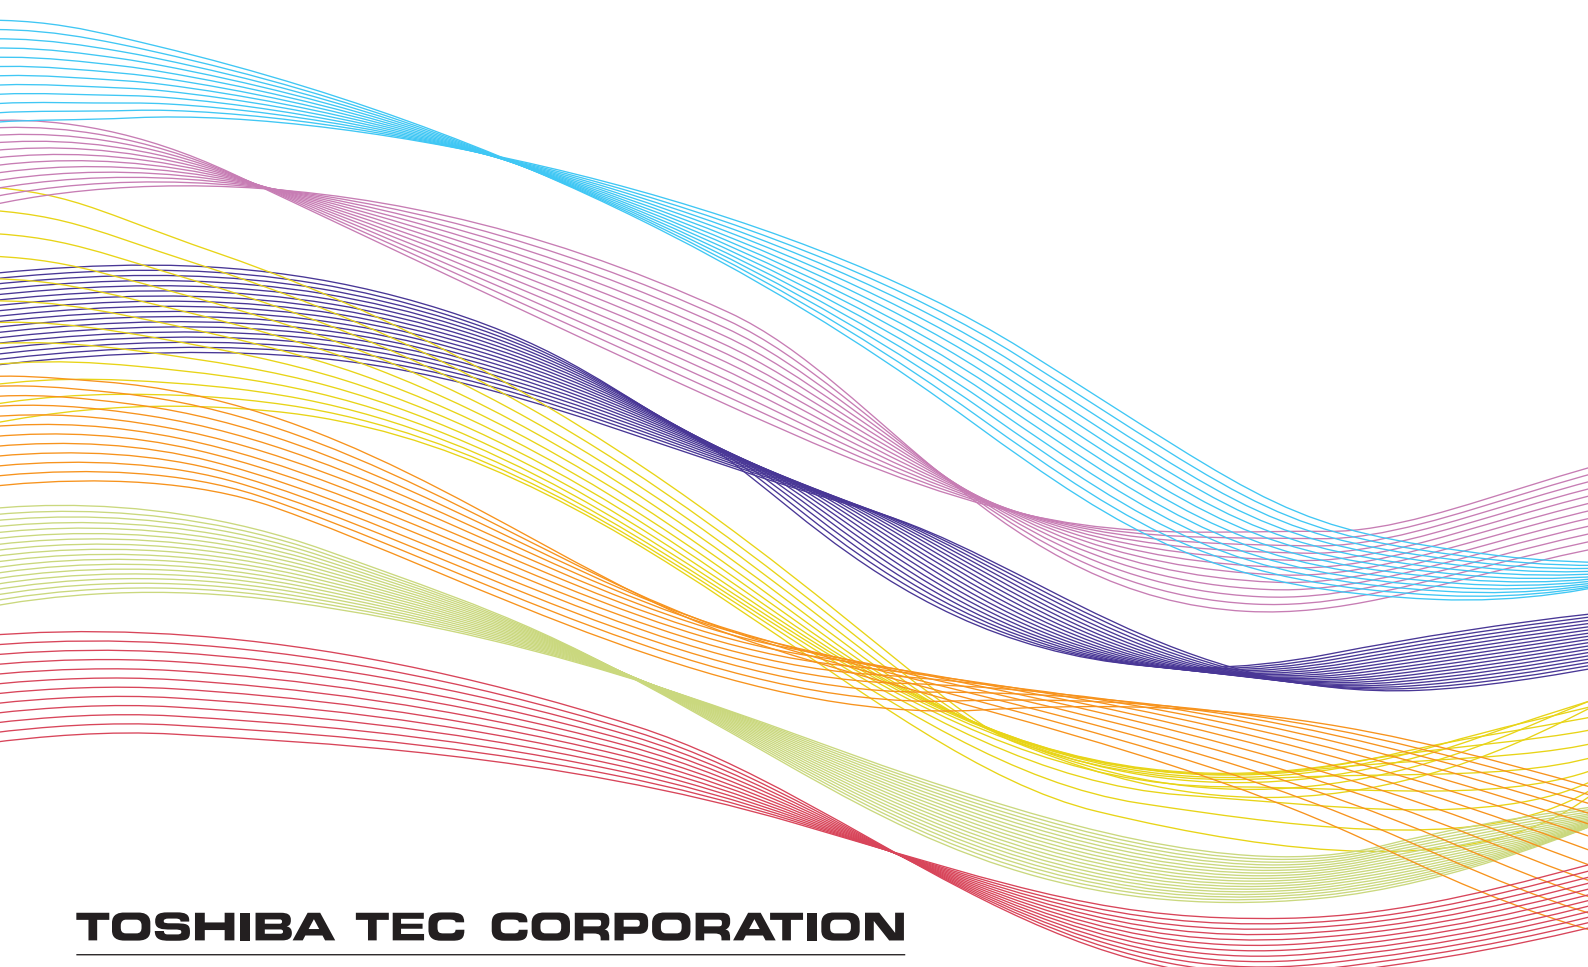

**TOSHIBA TEC CORPORATION**

2-17-2, HIGASHIGOTANDA, SHINAGAWA-KU, TOKYO, 141-8664, JAPAN



6LH09566000  
R071220E8700-TTEC  
2008-06